


## AMP EXTRACTION TOOL P/N 753760-1 FOR EXTRACTING LOW PROFILE, MINI AMP-IN\* TERMINALS FROM CONNECTOR HOUSINGS INSTRUCTION SHEET

IS-207J Released 8-25-82 Revised 1-8-85

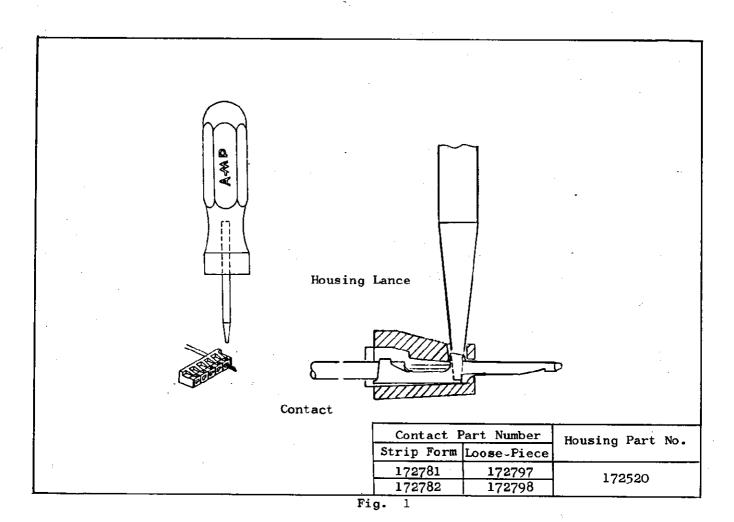

## 1. INTRODUCTION:

AMP\* extraction tool P/N 753760-1 has been designed to extract Mini AMP-IN\* terminals from header housing. Read this instruction sheet carefully, before you start operation.

## 2. EXTRACTION PROCEDURE:

(a) Hold the tool as shown in Fig. 1 (left), and apply the tip end of the tool into the groove of housing where the housing lance is provided until it bottoms in the groove. (See Fig. 1, (right).

(b) With the tip end of the tool bottomed in the groove, turn lightly to incline the tool grip, so as to dig up with the tip end. This will unlock the contact, and it can be removed easily by pulling the crimped wire lightly by the fingers. (See Fig. 1.)

## NOTE:

It is important to confirm if the tool tip end is just correctly bottomed in the groove. Excessive forcing is not necessary to extract terminals.