



MICROCHIP

MCP8063
12V 3-Phase BLDC
Sensorless Fan Controller
Demonstration Board Kit
User's Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, dsPIC, FlashFlex, flexPWR, JukeBlox, KEELOQ, KEELOQ logo, Kleer, LANCheck, MediaLB, MOST, MOST logo, MPLAB, OptoLyzer, PIC, PICSTART, PIC³² logo, RightTouch, SpyNIC, SST, SST Logo, SuperFlash and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

The Embedded Control Solutions Company and mTouch are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, BodyCom, chipKIT, chipKIT logo, CodeGuard, dsPICDEM, dsPICDEM.net, ECAN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, KleerNet, KleerNet logo, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, RightTouch logo, REAL ICE, SQI, Serial Quad I/O, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademarks of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2014 - 2015, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-63277-493-4

**QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
= ISO/TS 16949 =**

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC[®] MCUs and dsPIC[®] DSCs, KEELOQ[®] code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

**Object of Declaration: MCP8063 12V 3-Phase BLDC Sensorless Fan Controller
Demonstration Board Kit**

EU Declaration of Conformity

Manufacturer: Microchip Technology Inc.
2355 W. Chandler Blvd.
Chandler, Arizona, 85224-6199
USA

This declaration of conformity is issued by the manufacturer.

The development/evaluation tool is designed to be used for research and development in a laboratory environment. This development/evaluation tool is not intended to be a finished appliance, nor is it intended for incorporation into finished appliances that are made commercially available as single functional units to end users. This development/evaluation tool complies with EU EMC Directive 2004/108/EC and as supported by the European Commission's Guide for the EMC Directive 2004/108/EC (8th February 2010).

This development/evaluation tool complies with EU RoHS2 Directive 2011/65/EU.

This development/evaluation tool, when incorporating wireless and radio-telecom functionality, is in compliance with the essential requirement and other relevant provisions of the R&TTE Directive 1999/5/EC and the FCC rules as stated in the declaration of conformity provided in the module datasheet and the module product page available at www.microchip.com.

For information regarding the exclusive, limited warranties applicable to Microchip products, please see Microchip's standard terms and conditions of sale, which are printed on our sales documentation and available at www.microchip.com.

Signed for and on behalf of Microchip Technology Inc. at Chandler, Arizona, USA


Derek Carlson
VP Development Tools

12-Sep-14
Date

NOTES:



Table of Contents

Preface	7
Introduction.....	7
Document Layout	7
Conventions Used in this Guide	8
Recommended Reading.....	9
The Microchip Web Site	9
Customer Support	9
Document Revision History	10
Chapter 1. Product Overview	
1.1 Introduction	11
1.2 MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Hardware description	12
1.3 MCP8063 Daughter Board	13
1.4 What the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit includes	13
Chapter 2. Installation and Operation	
2.1 Getting Started	15
2.2 MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit Software description	19
Appendix A. Schematics and Layouts	
A.1 Introduction	25
A.2 Board – Schematic	26
A.3 Board – Top Silk	27
A.4 Board – Top Copper and Silk	28
A.5 Board – Top Copper	29
A.6 Board – Bottom Copper	30
A.7 Board – Bottom Copper and Silk	31
A.8 Board – Bottom Solder	32
A.9 Daughter Board - Schematic	33
A.10 Daughter Board - Top Silk	34
A.11 Daughter Board - Top Copper and Silk	34
A.12 Daughter Board - Top Copper	34
A.13 Daughter Board - Bottom Copper	35
A.14 Daughter Board - Bottom Copper and Silk	35
A.15 Daughter Board - Bottom Solder	35
Appendix B. Bill of Materials (BOM)	
Worldwide Sales and Service	40

NOTES:

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXXXXXA”, where “XXXXXXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit. Items discussed in this chapter include:

- Document Layout
- Conventions Used in this Guide
- Recommended Reading
- The Microchip Web Site
- Customer Support
- Document Revision History

DOCUMENT LAYOUT

This document describes how to use the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit as an evaluation tool to debug on a target motor system. The manual layout is as follows:

- **Chapter 1. “Product Overview”** – Important information about the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit.
- **Chapter 2. “Installation and Operation”** – Includes instructions on how to get started with the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit.
- **Appendix A. “Schematics and Layouts”** – Shows the schematic and layout diagrams for the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit.
- **Appendix B. “Bill of Materials (BOM)”** – Lists the parts used to build the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit.

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples
Arial font:		
Italic characters	Referenced books	<i>MPLAB[®] IDE User's Guide</i>
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u>File>Save</u>
Bold characters	A dialog button	Click OK
	A tab	Click the Power tab
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
Courier New font:		
Plain Courier New	Sample source code	#define START
	Filenames	autoexec.bat
	File paths	c:\mcc18\h
	Keywords	_asm, _endasm, static
	Command-line options	-Opa+, -Opa-
	Bit values	0, 1
	Constants	0xFF, 'A'
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
Square brackets []	Optional arguments	mcc18 [options] <i>file</i> [options]
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}
Ellipses...	Replaces repeated text	var_name [, var_name...]
	Represents code supplied by user	void main (void) { ... }

RECOMMENDED READING

This user's guide describes how to use the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit. Another useful document is listed below. The following Microchip document is available and recommended as a supplemental reference resource.

- **MCP8063 Data Sheet – “3-Phase Brushless Sinusoidal Sensorless Motor Driver” (DS20005257)**

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at:
<http://www.microchip.com/support>.

DOCUMENT REVISION HISTORY

Revision B (June 2015)

- Added **Section 1.3 “MCP8063 Daughter Board”** to **Chapter 1. “Product Overview”**
- Updated **Section 2.1.1 “Software Installation”**
- Updated **Appendix A. “Schematics and Layouts”** to include the MCP8063 Daughter Board.
- Updated **Appendix B. “Bill of Materials (BOM)”** with the list of parts necessary to build the MCP8063 Daughter Board.

Revision A (March 2014)

- Initial Release of this Document.

Chapter 1. Product Overview

1.1 INTRODUCTION

The MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board allows the control and monitoring of Microchip 12V fan driver devices, such as the MCP8063 or MTD6501. The MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board is controlled by PC software via a USB connection.

The MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board software provides several features, such as fan driver power supply control and monitoring, pulse-width modulation (PWM) control as well as speed and current consumption monitoring. It also allows automatic application testing.

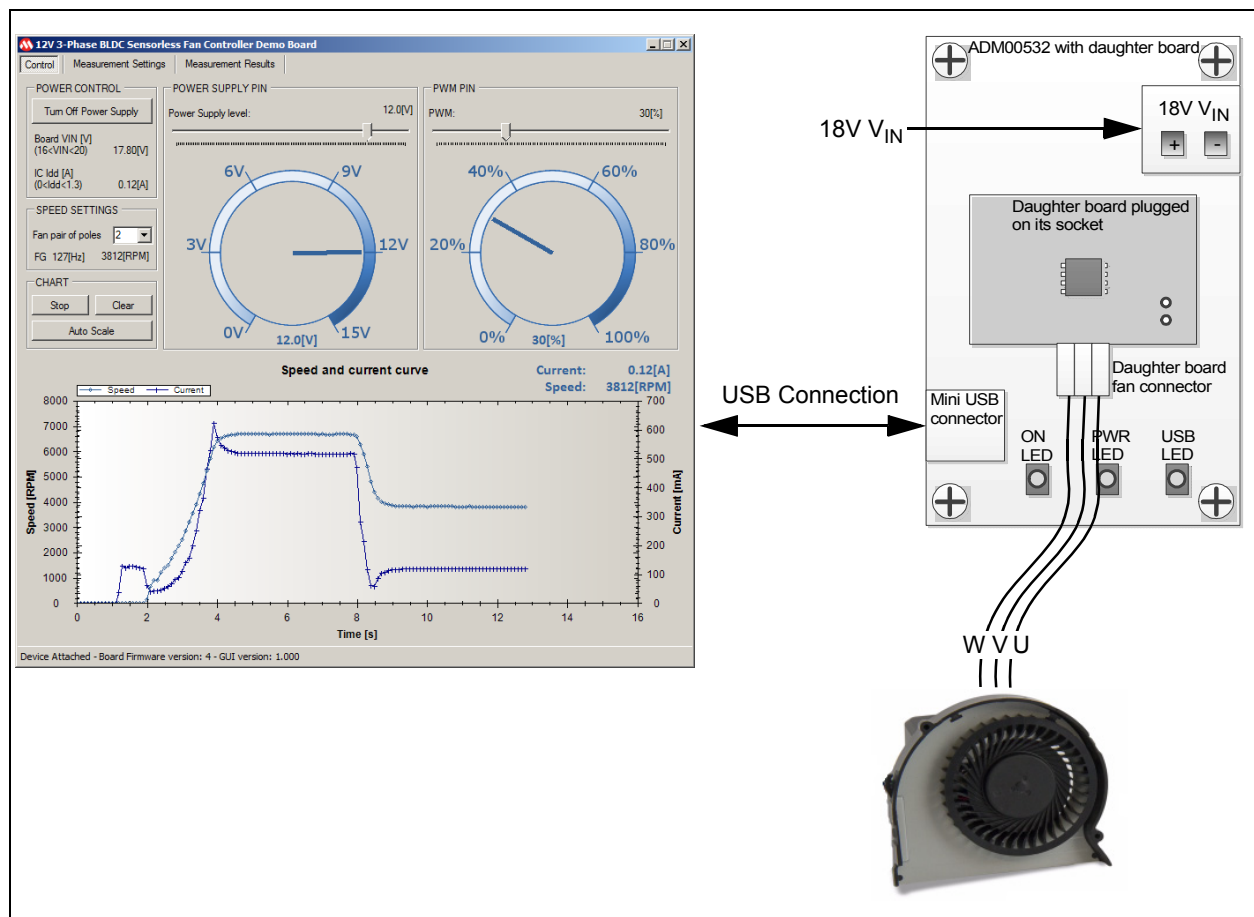


FIGURE 1-1: System Overview.

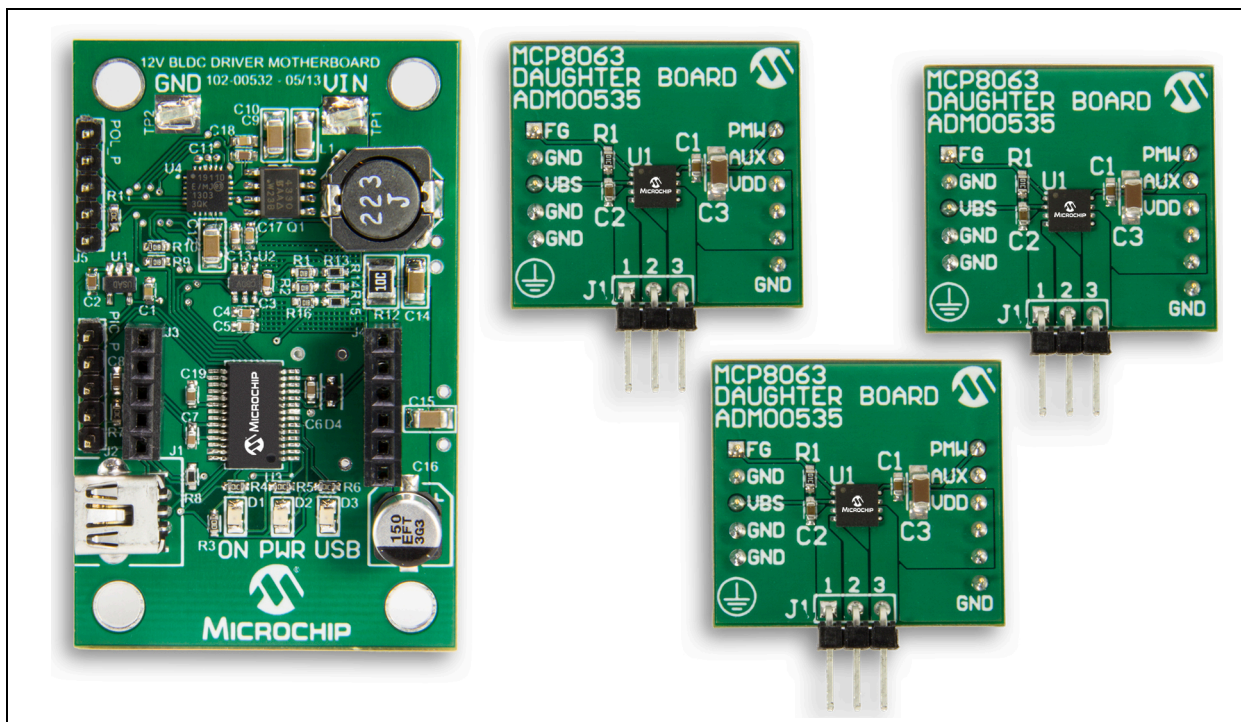


FIGURE 1-2: MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit Overview.

1.2 MCP8063 12V 3-PHASE BLDC SENSORLESS FAN CONTROLLER DEMONSTRATION BOARD HARDWARE DESCRIPTION

The MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board contains several components:

- PIC24FJ64GB002 microcontroller for USB connection, PWM generation, FG frequency measurement, V_{DD} measurement, activation of other signals and component communication
- MCP1824 LDO regulator to provide 3.3V to the microcontroller
- MCP19110 buck regulator to provide power supply to the fan driver
- MCP3421 Delta-Sigma ADC for sensing the fan driver current consumption

More details on the schematic are available in [Appendix A. “Schematics and Layouts”](#).

1.3 MCP8063 DAUGHTER BOARD

This section provides a brief description of the daughter board (ADM00535) which is included in the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit. The MCP8063 Daughter Board has been designed to be used with a motherboard. However, it can also be used independently as a standalone board. The board overview is represented in [Figure 1-3](#).

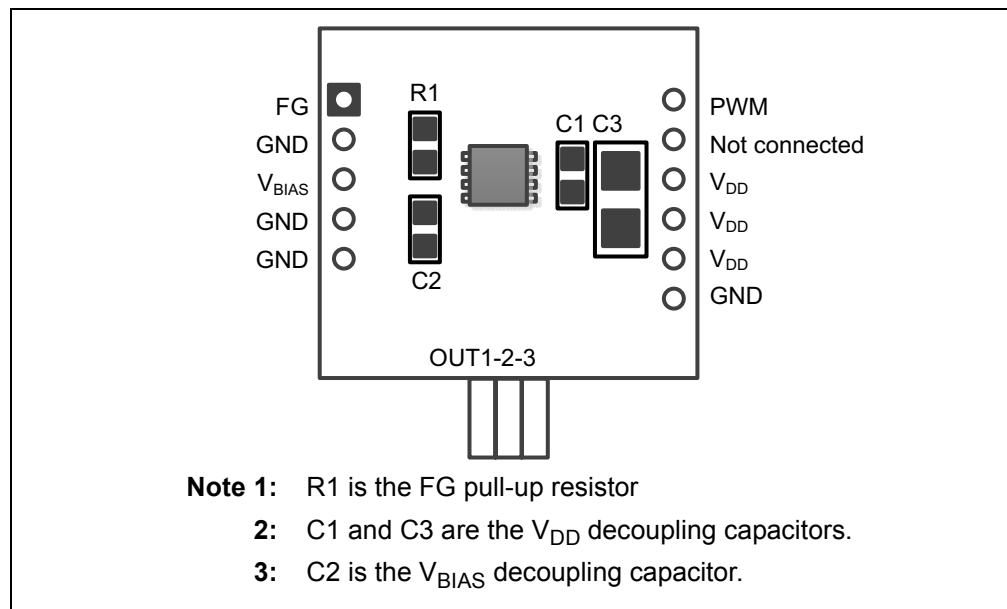


FIGURE 1-3: MCP8063 Daughter Board Overview.

The daughter board also features a 3-phase BLDC motor connector that can be used to attach a fan.

More details on the schematic are available in [Appendix A. “Schematics and Layouts”](#)

1.4 WHAT THE MCP8063 12V 3-PHASE BLDC SENSORLESS FAN CONTROLLER DEMONSTRATION BOARD KIT INCLUDES

The MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit (ADM00575) includes:

- MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board (ADM00532)
- 3 x MCP8063 Daughter Boards (ADM00535)
- One mini-USB cable
- Important Information Sheet

NOTES:

Chapter 2. Installation and Operation

2.1 GETTING STARTED

The following sections describe how to use the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board.

2.1.1 Software Installation

Download the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board software installer from the Microchip website at www.microchip.com. The GUI can be downloaded from this web page as well.

Note: This application requires Microsoft®.NET Framework 3.5 or later.

1. Unzip the archive and click on the .exe file. The MCP8063 Demo Board GUI Setup will initiate. Click **Next** to start the installation.

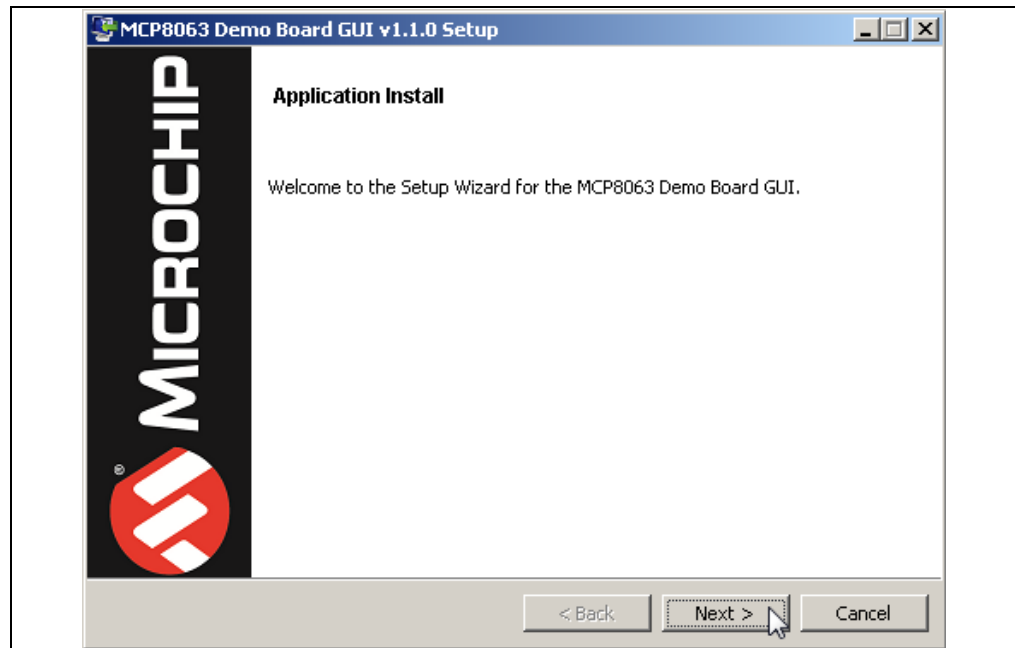


FIGURE 2-1: MCP8063 Demo Board GUI - Welcome Screen.

2. To proceed with the installation, read the License Agreement. Accept by clicking the radio button corresponding to **I accept the agreement**, then click **Next**.

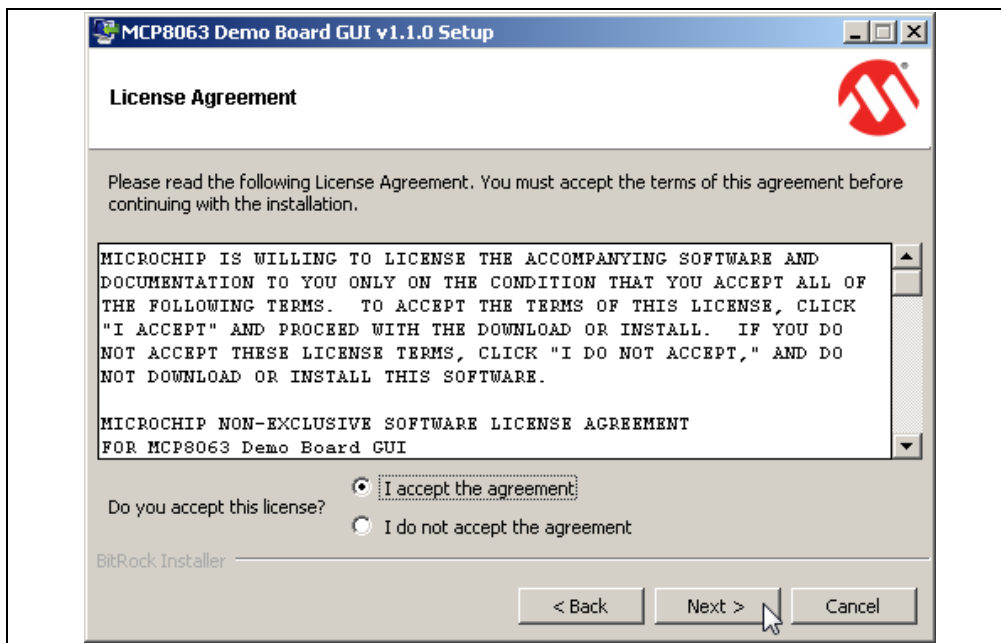


FIGURE 2-2: MCP8063 Demo Board GUI - License Agreement Screen.

3. On the Installation Directory dialog, browse for the desired location, or click **Next** to install in the default location.

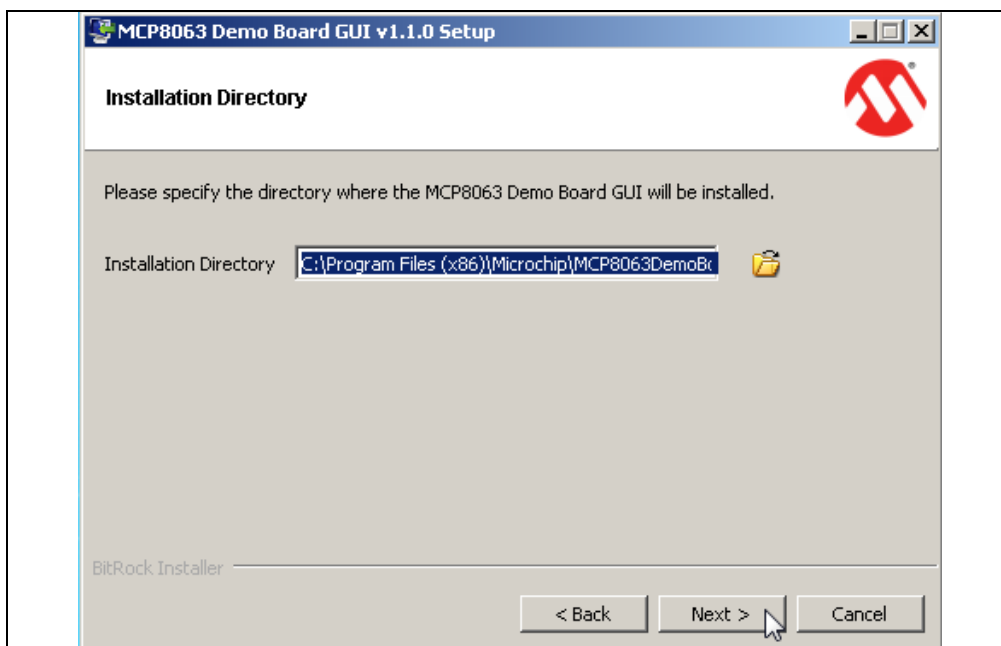


FIGURE 2-3: MCP8063 Demo Board GUI - Installation Directory Screen.

- Once the path is chosen, the software is ready to install. Click **Next** to proceed. The installation status window appears, showing the installation progress. Click **Next** to proceed.

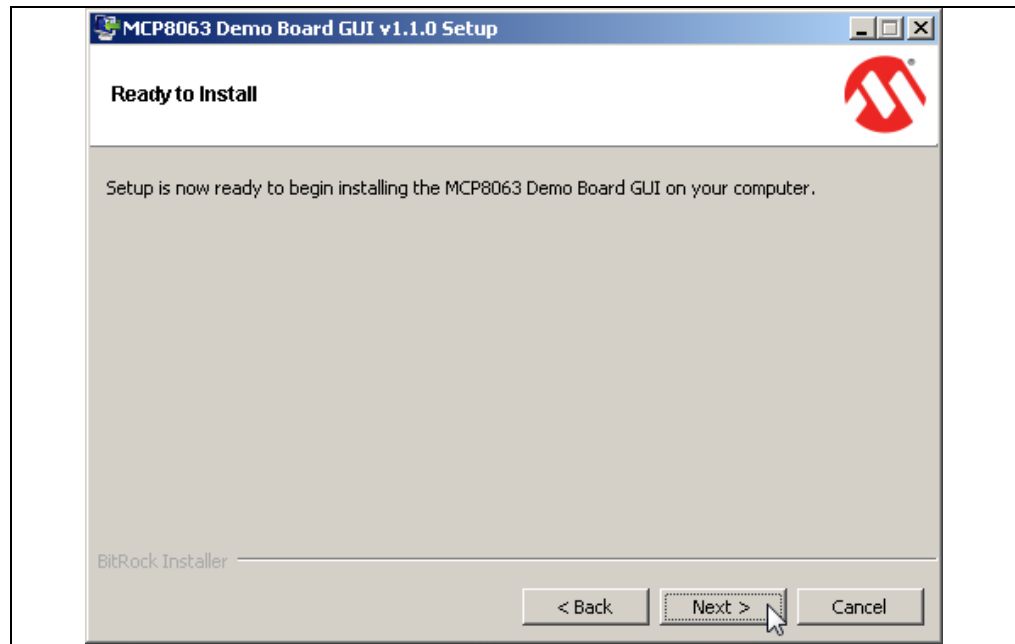


FIGURE 2-4: MCP8063 Demo Board GUI - Ready to Install Screen.

- Once the **Install Complete** screen appears, click **Finish** to exit the Installer.

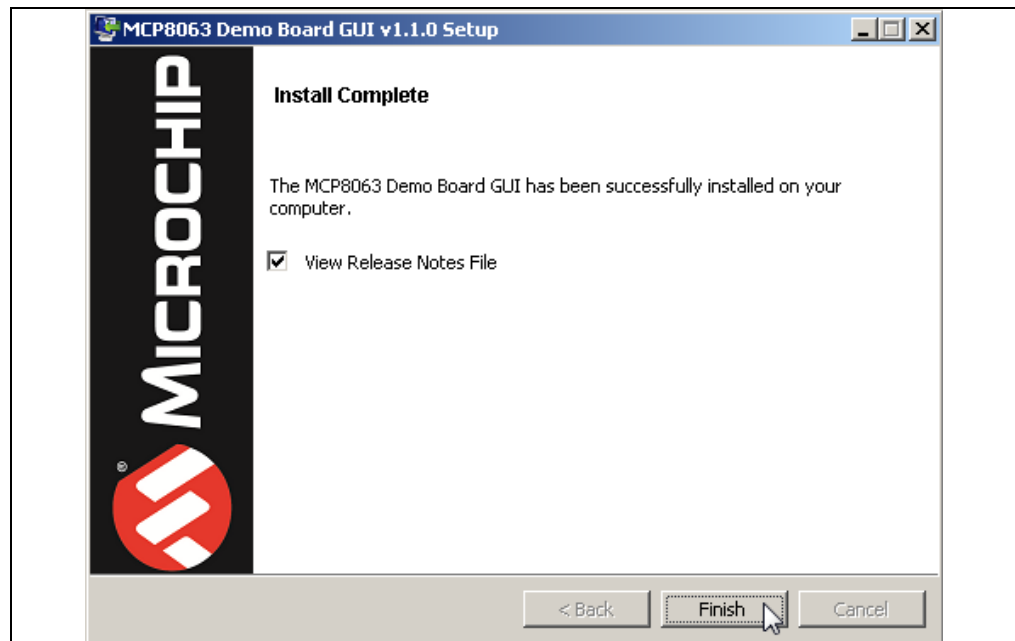


FIGURE 2-5: MCP8063 Demo Board GUI - Install Complete Screen.

- Start the software by either going to Windows Start button > All Programs > Microchip > MCP8063DemoBoardGUI or by double-clicking the software icon on the desktop.

2.1.2 Board Installation

Figure 2-6 identifies the required points for using the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board.

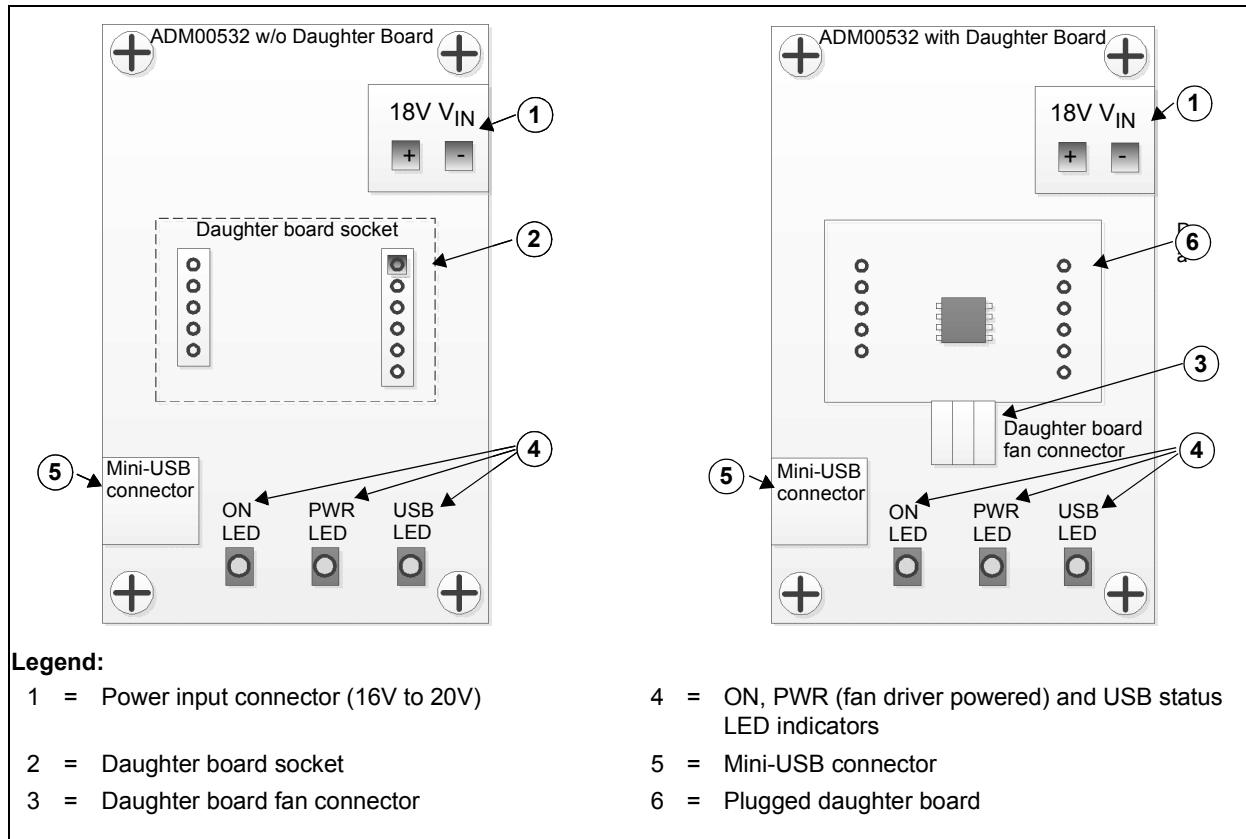


FIGURE 2-6: Top View - Hardware Components.

To use the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit, these steps should be followed:

1. Plug in the MCP8063 Daughter Board on its socket (see Figure 2-6).
2. To plug in a 3-phase BLDC sensorless fan, use the MCP8063 Daughter Board fan connector. Note that the connection can be done in normal or reverse mode. If the fan rotates in reverse mode, the connector can be flipped to rotate in normal mode.
3. Start the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board software.
4. Plug the mini-USB cable from the USB port of a computer to the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board connector. The LED indicating a ON state will light up.
5. If required, let the computer identify the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board. Once the USB connection is ready, the USB LED will light up and remain on for as long as the USB connection is active.
6. Restart the computer, if required.
7. Connect the power supply to the V_{IN} test point. The V_{IN} value is $18V \pm 10\%$. The power supply should be able to deliver up to 1.0A. The GUI should report the V_{IN} value of the board.

Note: The order of these steps is provided as an example and can be changed.

2.2 MCP8063 12V 3-PHASE BLDC SENSORLESS FAN CONTROLLER DEMONSTRATION BOARD KIT SOFTWARE DESCRIPTION

The MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit software window contains three tabs:

- **Control:** provides the options available for controlling and monitoring the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board
- **Measurement Settings**
- **Measurement Results**

2.2.1 Control Tab

Figure 2-7 shows the options and functions available for controlling and monitoring the board.

Note: All functions presented in Figure 2-7 are enabled only when the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board is connected to the PC via a USB connection.

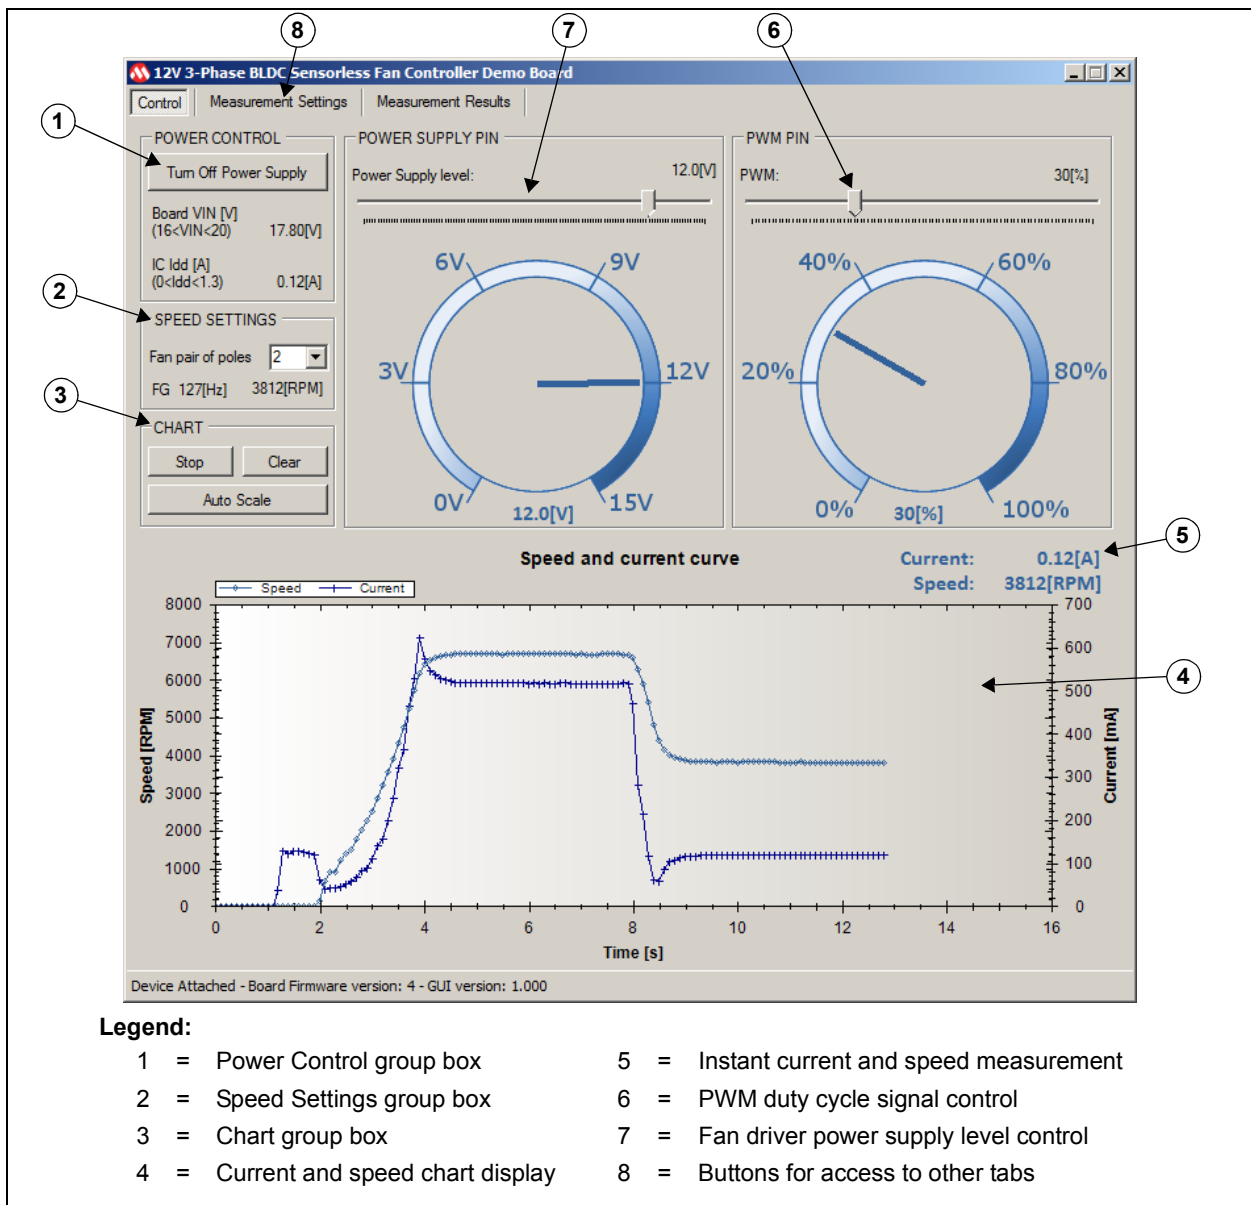


FIGURE 2-7: GUI – Control Tab.

2.2.1.1 POWER CONTROL

The Power Control group box includes the **Turn On/Off Power Supply** button which allows the power supply of the fan driver to be enabled/disabled.

Before enabling the fan driver power, verify that the input voltage level indicated for the board is between 16V to 20V. Running outside this range may work but stability cannot be ensured. The power supply part on the board is not able to generate a voltage level above the input voltage level.

The current is monitored and the fan driver power supply will shut down if the current goes above 2.5A.

2.2.1.2 SPEED SETTINGS

This group box allows monitoring the FG pin frequency from the fan driver in Hz. This frequency is converted to mechanical speed (Revolutions Per Minute - RPM). In order for the RPM mechanical speed to be displayed correctly, a 4P/6S fan (two pairs of poles) has to be plugged in. If the plugged motor contains a different number of poles, the value can be adapted so that the mechanical RPM is displayed correctly.

2.2.1.3 CHART

This section activates and controls the chart described in [Section 2.2.1.4 “Display Chart”](#). The chart adds 10 values per second. The three buttons have the following functions:

- **Start/Stop** – Allows the value acquisition to start or stop
- **Clear** – Removes all the values added to the chart
- **Auto Scale** – Allows the default scaling to be restored. In Default Scaling mode, the chart will automatically adjust the scaling to ensure the complete view of all the added values. In addition, when selecting a part of the chart with the mouse, it is possible to zoom in the selection. The mouse wheel zoom in/out is also enabled.

2.2.1.4 DISPLAY CHART

Once enabled, the chart will display the speed curve in RPM and the measured current curve in mA over time. The chart adds 10 values per second.

2.2.1.5 CURRENT AND SPEED INDICATOR

This part clearly shows the instant current consumption and the instant speed.

2.2.1.6 PWM PIN

The PWM Pin box provides a slide bar to set the PWM duty cycle on the fan driver PWM pin. The gauge corresponding to the PWN function indicates the PWM duty cycle currently applied by the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board.

2.2.1.7 FAN DRIVER POWER SUPPLY LEVEL CONTROL

The fan driver Power Supply Pin box features a slide bar that allows setting the desired voltage value for the fan driver. The gauge corresponding to the Power Supply function indicates the instant fan driver power supply value measured by the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board.

2.2.2 Measurement Settings Tab

The **Measurement Settings** tab features several tools for checking if the fan is correctly adapted to the fan driver by evaluating the fan behavior in different tests, several times and under different conditions.

Figure 2-8 shows the **Measurement Settings** tab. Next sections provide further details.

12V 3-Phase BLDC Sensorless Fan Controller Demo Board

Control | **Measurement Settings** | Measurement Results

MEASUREMENT SETTINGS

PWM Max [%] Power Supply level Max [V]
PWM Min [%] Power Supply level Min [V]
PWM Step [%] Power Supply level Step [V]
Startup check duration from Power-On [s] Waiting time between each iteration [s]

Number of iterations per corner

STARTUP TEST SETTINGS

Enable startup test

PWM Change

Enable PWM Change test Braking delay [s] Do not restart if PWM change success
PWM Start [%]

SPEED CURVE AND STABILITY

Enable speed curve and stability Number of sample [s] Do speed curve for the whole PWM range (100% to 5%, each 1%)
 Do speed curve for the whole PSM range (14V to 2V, each 0.1V)

MEASUREMENT CONTROL

Current Test : No test launched

Device Attached - Board Firmware version: 4 - GUI version: 1.000

Legend:

- 1 = Measurement Settings group box
- 2 = Startup measurement
- 3 = PWM Change Measurement group box
- 4 = Speed Curve and Stability Measurement group box
- 5 = Measurement Control group box

FIGURE 2-8: GUI - Measurement Settings Tab.

2.2.2.1 MEASUREMENT SETTINGS

The **Measurement Settings** group box is used for defining the measurement corners required by the user. Once the automatic measurement starts (see [Section 2.2.2.5 “Measurement Control”](#)), all specified corners will be assessed for all selected tests. The list below details the available corner settings:

- **PWM Corners Measurement** – Requires the PWM Max (%), PWM Step (%) and PWM Min (%) values setting. The software will start with the maximum value entered and will decrease the PWM by the step value until it reaches the minimum entered PWM value.
- **Power Supply level corners** are similar to the PWM corners. A power supply level corner includes all PWM corners. This means that all PWM corners are measured for one power supply voltage level.
- **Startup check duration from Power-On [s]** – If the speed of the fan is measured as 0 RPM after this delay, the startup is considered a fail. The recommended value for this field is five seconds.
- **Waiting time between each iteration [s]** – This field specifies how many seconds are allocated for stopping the fan between two tests. This value will depend on the fan lag.
- **Number of iterations per corner** – This field designates the number of iterations for one corner.

2.2.2.2 STARTUP TEST SETTINGS

When the **Enable startup test** box is checked, the startup measurements are enabled, measuring every corner for this test. If **Enable startup test** is not enabled, the startup test is skipped. The other tests will be executed if they have been enabled.

2.2.2.3 PWM CHANGE

The PWM Change measurement starts with a PWM value of 100%. After the specified startup delay (entered in the **Startup check duration from Power-On [s]** field), the PWM changes depending on the PWM corner specified. The software will then verify if the fan is still running. If a delay value has been entered into the **Braking Delay [s]** field, this last check will be performed after the respective delay.

To reduce testing time, it is possible to skip the fan restart if the last PWM change has been successfully done by selecting the **Do not restart if PWM change success** check box.

2.2.2.4 SPEED CURVE AND STABILITY

This measuring tool requires a specified number of samples under preset conditions to check speed stability. If the **Do speed curve for the whole PWM range (100% to 5%, each 1%)** and/or the **Do speed curve for the whole PSM range (14V to 2V, each 0.1V)** check boxes are not selected, the corners previously set are measured. For this test, the number of iterations will always be one. When one of these check boxes is selected, the software will override the specified settings.

This test will report the current average, the maximum and minimum measured speed, the stability in percentage (%) and the sigma variation.

2.2.2.5 MEASUREMENT CONTROL

This group box contains a check box and a button that allows the user to control the test work flow:

- **Stop Measuring** – Starts and stops the required tests.
- **Autosave at the end of the measurements** – If checked, a measurement result file will be automatically saved when all the tests have been done. See [Section 2.2.3.1 “Measurement Results”](#) for the file location.

2.2.3 Measurement Results tab

The **Measurement Results** tab displays the test results. The user can manage from this tab where the data will be stored.

Figure 2-9 shows the **Measurement Results** sub-tab:

The screenshot shows the 'Measurement Results' sub-tab of the '12V 3-Phase BLDC Sensorless Fan Controller Demo Board' software. It includes a file path for saving results, checkboxes for autosave, and a table of test data.

Legend:

- 1 = Measurement Results group box
- 2 = Measurement Results table

Test Name	Item N°	PWM [%]	VDD [V]	FG [rpm]	I _{dd} [mA]	Result 1	Result 2	Result 3	Result
Test Name	Iteration	PWM	VDD	Speed AVG	Current AVG	Startup Result			
Startup	1	30	13	4092	132	Startup Success			
Startup	2	30	13	4091	131	Startup Success			
Startup	3	30	13	4091	131	Startup Success			
Startup	4	30	13	4091	129	Startup Success			
Startup	5	30	13	4097	132	Startup Success			
Startup	6	30	13	4092	131	Startup Success			
Startup	7	30	13	4091	131	Startup Success			
Startup	8	30	13	4091	131	Startup Success			
Startup	9	30	13	4098	131	Startup Success			
Startup	10	30	13	4091	131	Startup Success			
Test Name	Iteration	PWM	VDD	Speed AVG	Current AVG	Startup Result			
Startup	1	15	13	2169	42	Startup Success			
Startup	2	15	13	2167	41	Startup Success			
Startup	3	15	13	2167	41	Startup Success			
Startup	4	15	13	2169	41	Startup Success			
Startup	5	15	13	2170	41	Startup Success			
Startup	6	15	13	2167	41	Startup Success			
Startup	7	15	13	2169	41	Startup Success			
Startup	8	15	13	2169	41	Startup Success			
Startup	9	15	13	2170	41	Startup Success			
Startup	10	15	13	2170	41	Startup Success			
Test Name	Iteration	PWM	VDD	Speed AVG	Current AVG	Startup Result			

Device Attached - Board Firmware version: 4 - GUI version: 1.000

FIGURE 2-9: GUI - Measurement Results Tab.

2.2.3.1 MEASUREMENT RESULTS

The user can manage the results of the tests by means of the three buttons in this group:

- **Select location for result file** – This opens a window which allows the user to set where the test result file will be stored. The user has to make sure that the selected location has write access. In addition, Microsoft Office® Excel® 2003 or later has to be installed in order for the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Software to create a Microsoft Excel file. If Microsoft Excel is not installed, it is possible to copy the data from the result table and paste it into the appropriate software.
- **Save current results** – This button stores the current measurements displayed in the result table in a Microsoft Excel file.
- **Clear All Results** – This clears the current results displayed in the result table.

2.2.3.2 RESULT TABLE

The results are shown in this table.

The first six columns are common to all tests while the others are relevant only for a particular test.




Appendix A. Schematics and Layouts

A.1 INTRODUCTION


This appendix contains the schematics and layouts for the following devices which are included in the MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board Kit (ADM00575):

- 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board (ADM00532):
 - Board – Schematic
 - Board – Top Silk
 - Board – Top Copper and Silk
 - Board – Top Copper
 - Board – Bottom Copper
 - Board – Bottom Copper and Silk
 - Board – Bottom Solder
- MCP8063 Daughter Board (ADM00535):
 - Daughter Board - Schematic
 - Daughter Board - Top Silk
 - Daughter Board - Top Copper and Silk
 - Daughter Board - Top Copper
 - Daughter Board - Bottom Copper
 - Daughter Board - Bottom Copper and Silk
 - Daughter Board - Bottom Solder


A.2 BOARD – SCHEMATIC

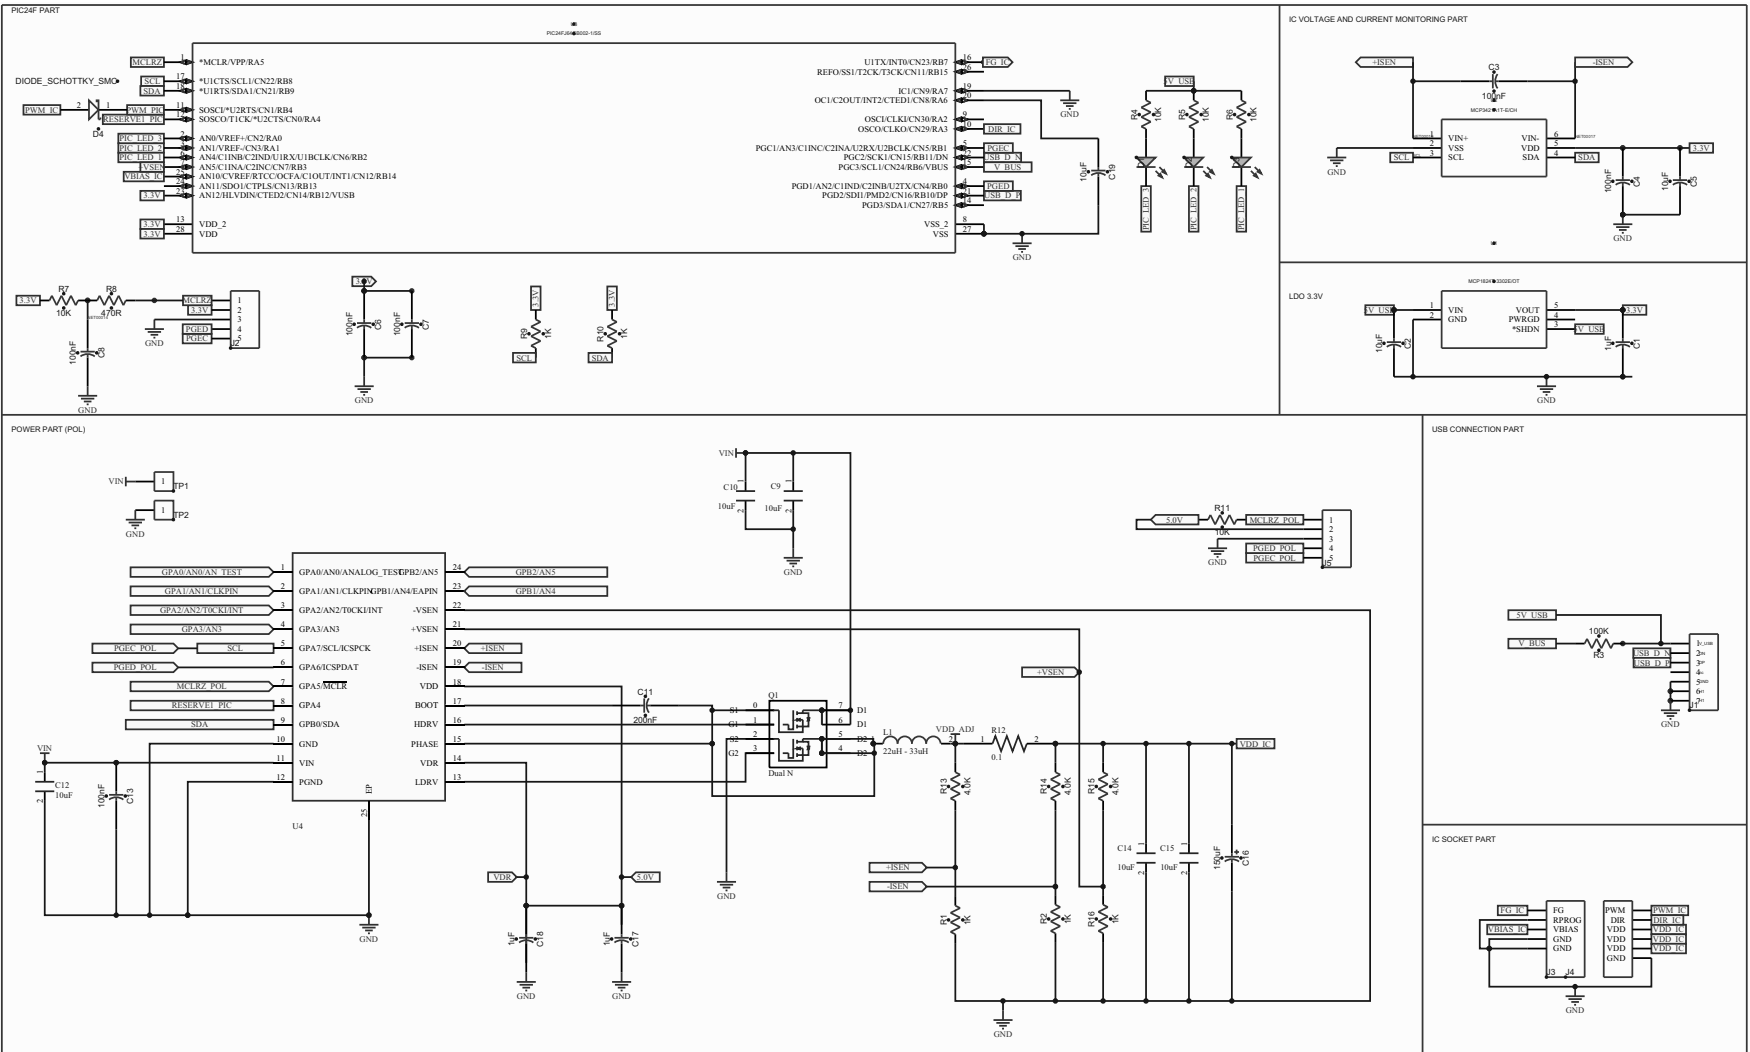


A.3 BOARD – TOP SILK

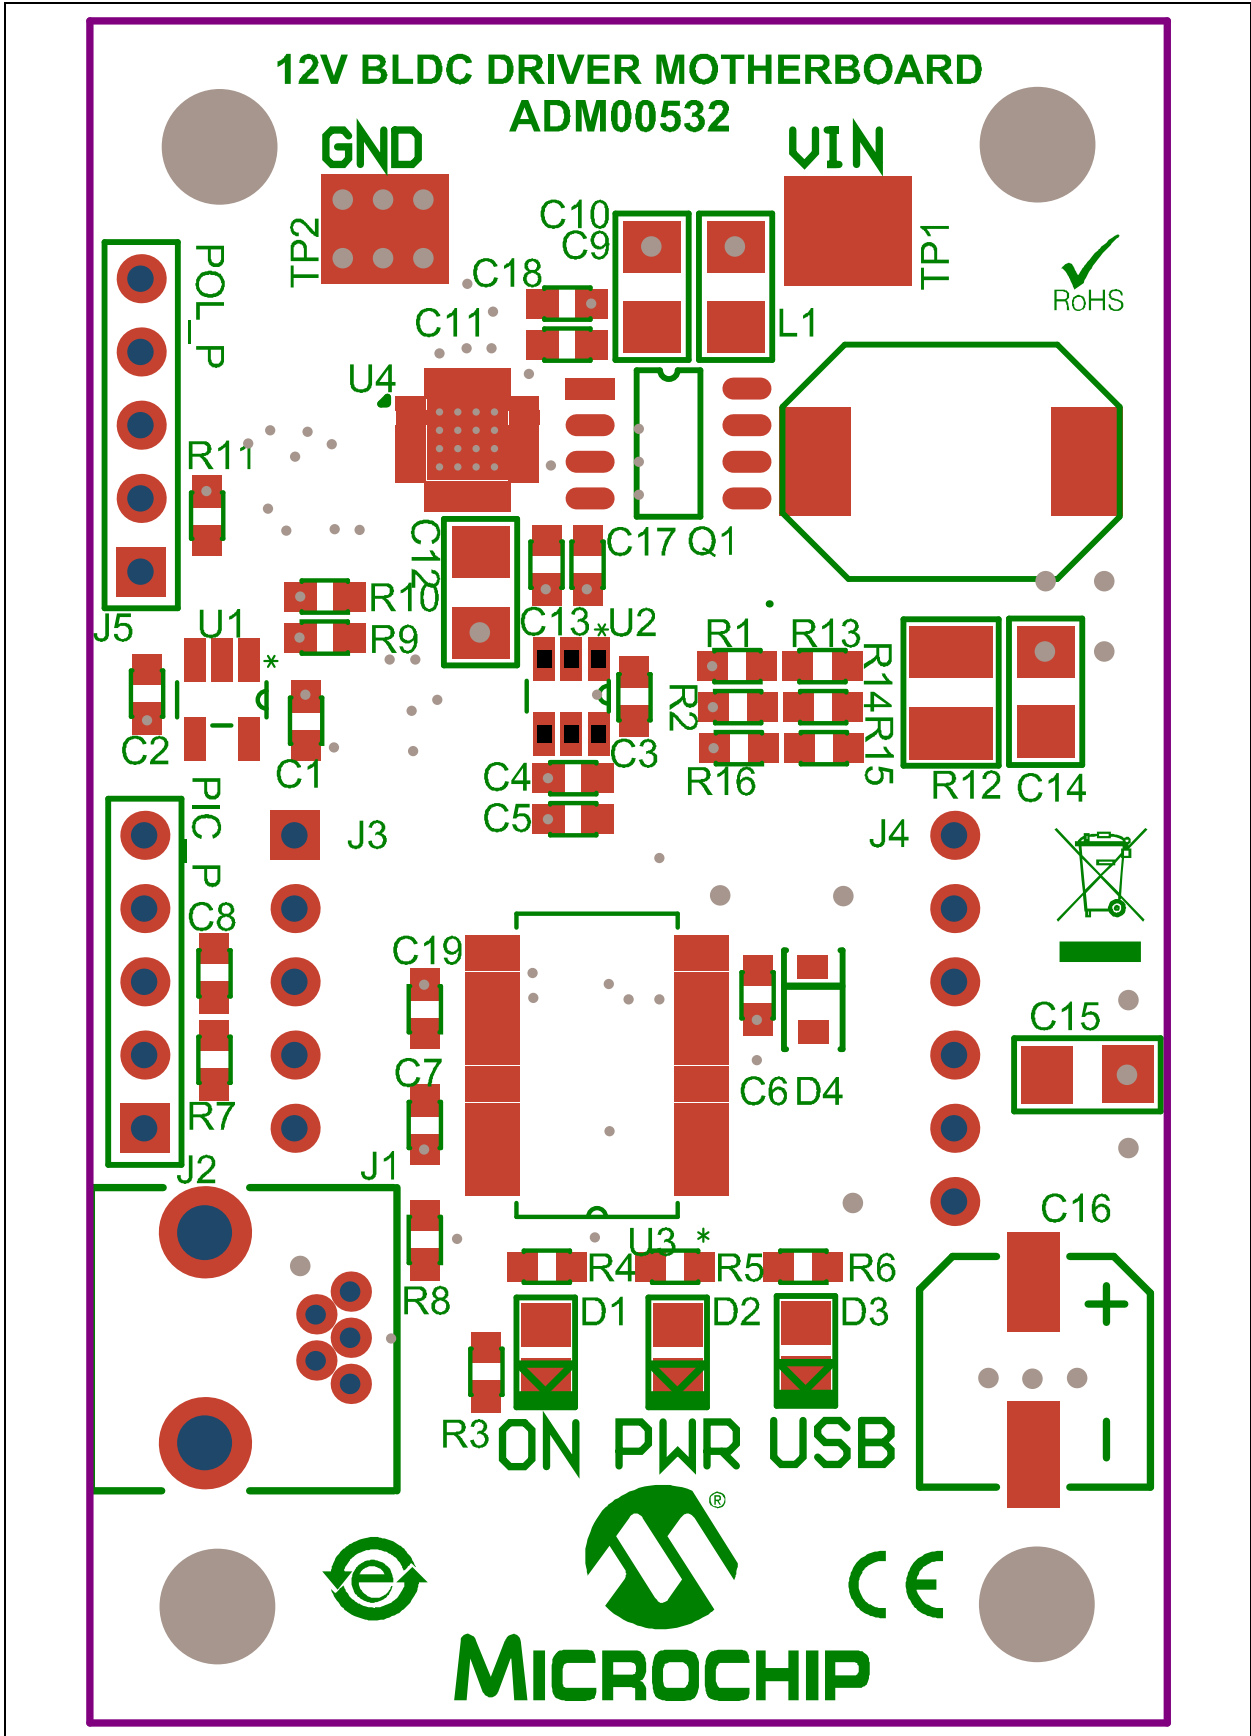


A.4 BOARD – TOP COPPER AND SILK

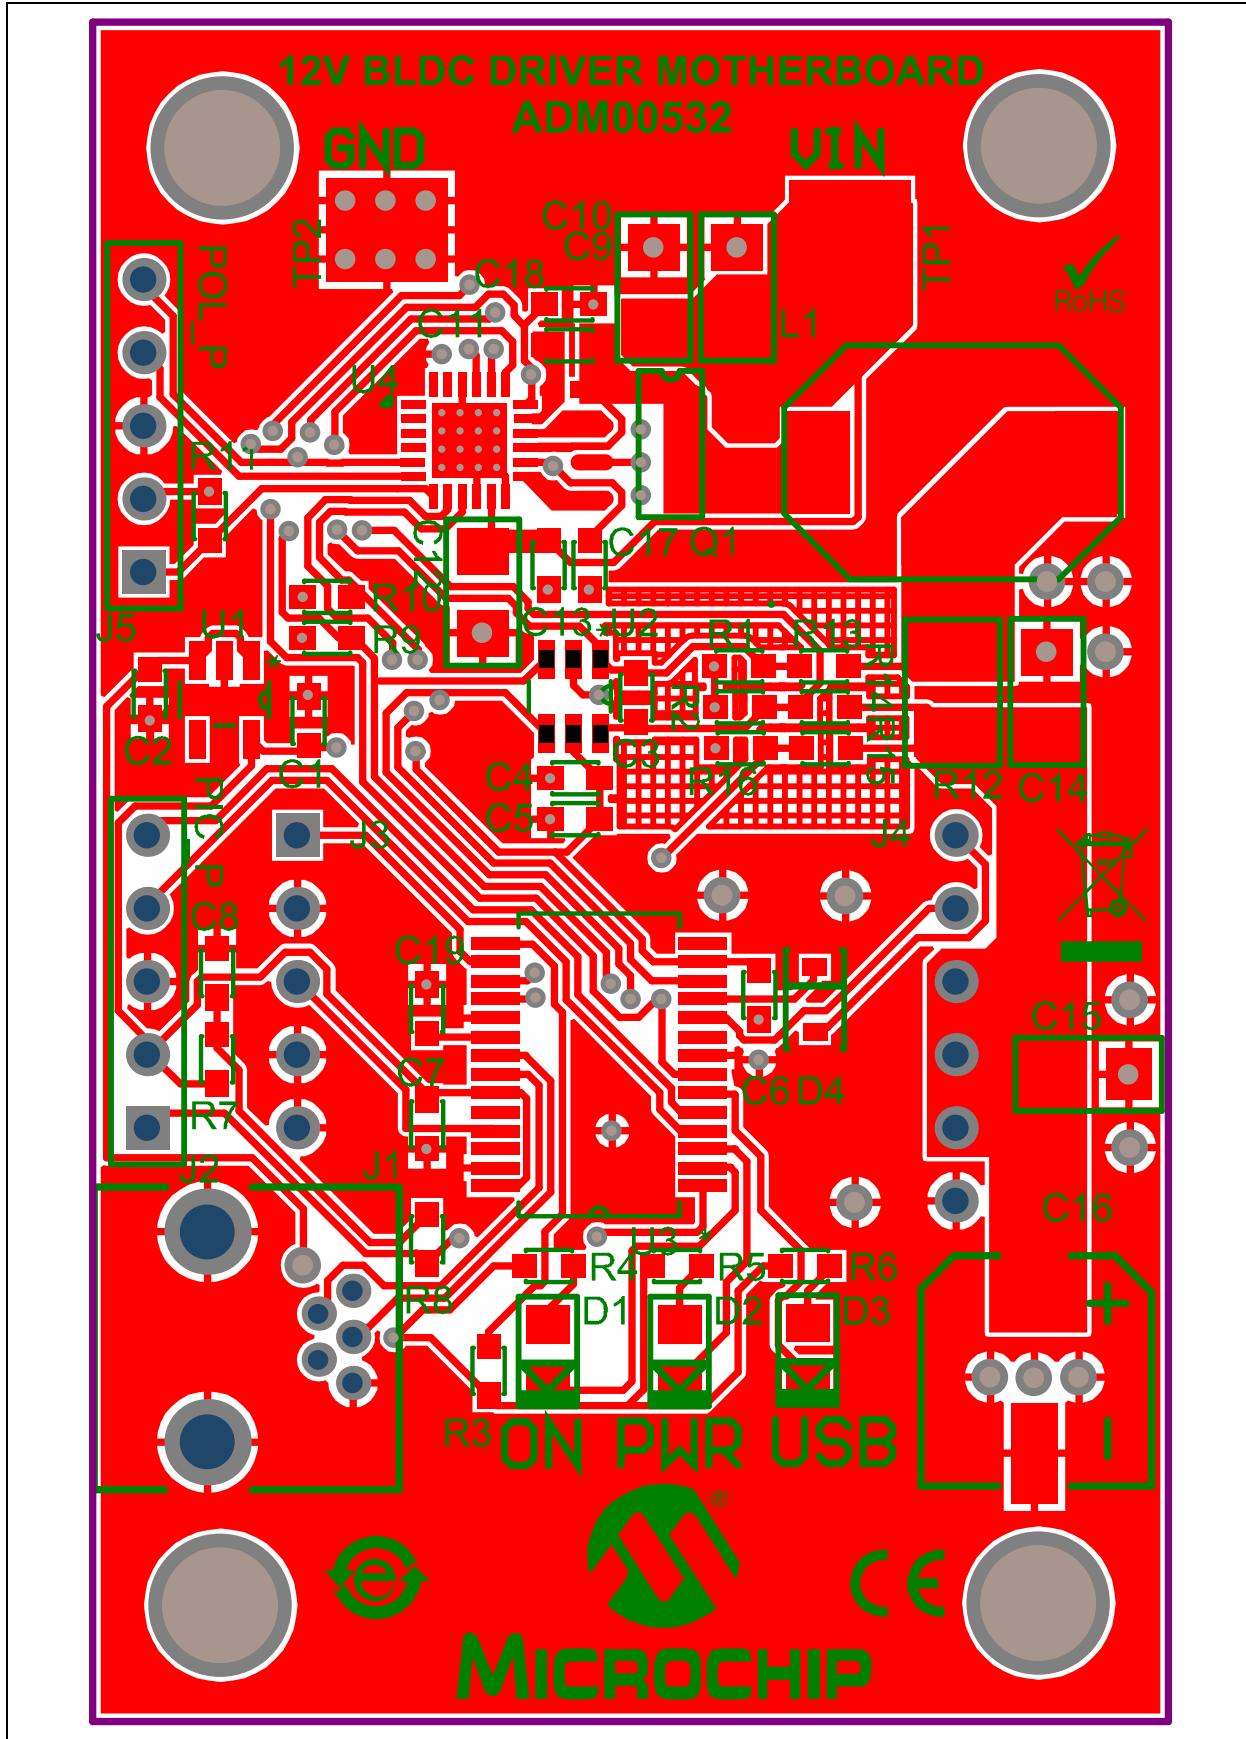


A.5 BOARD – TOP COPPER

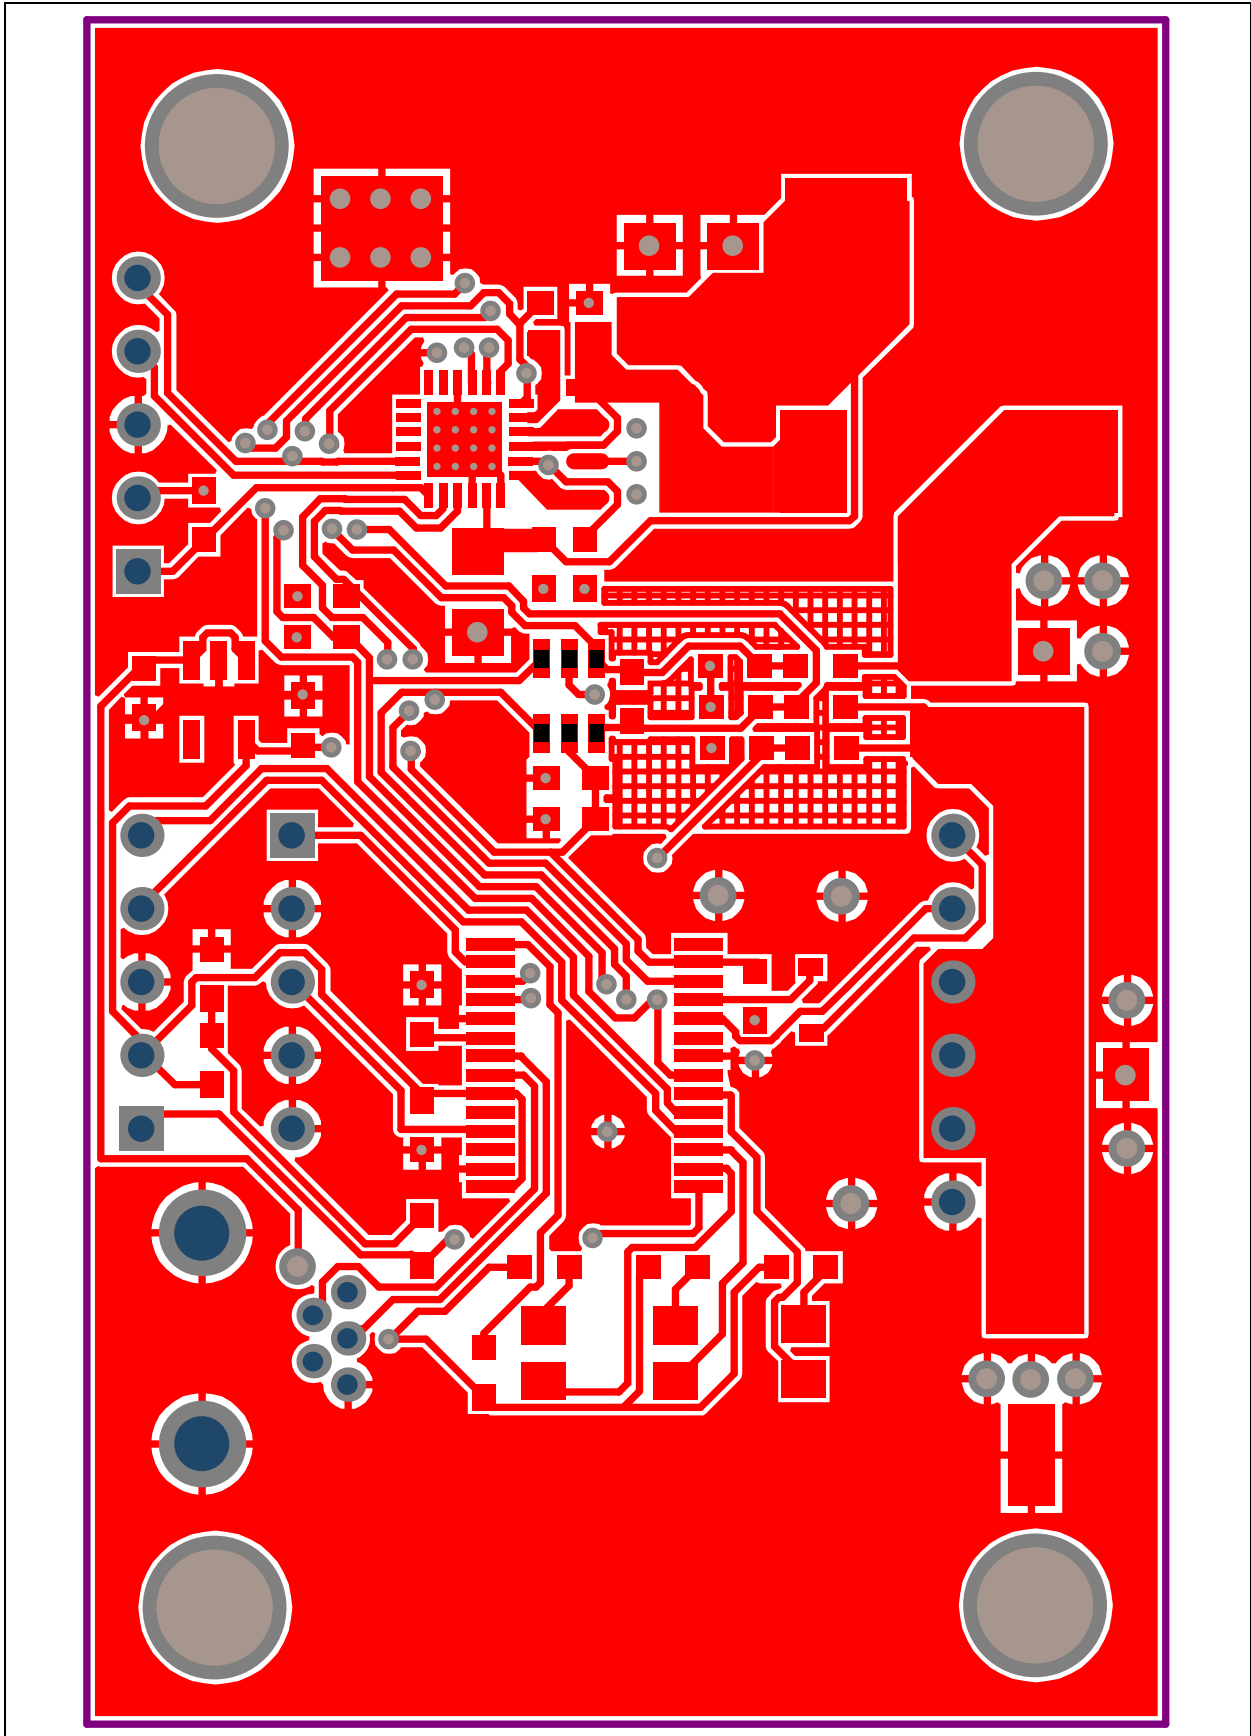


A.6 BOARD – BOTTOM COPPER

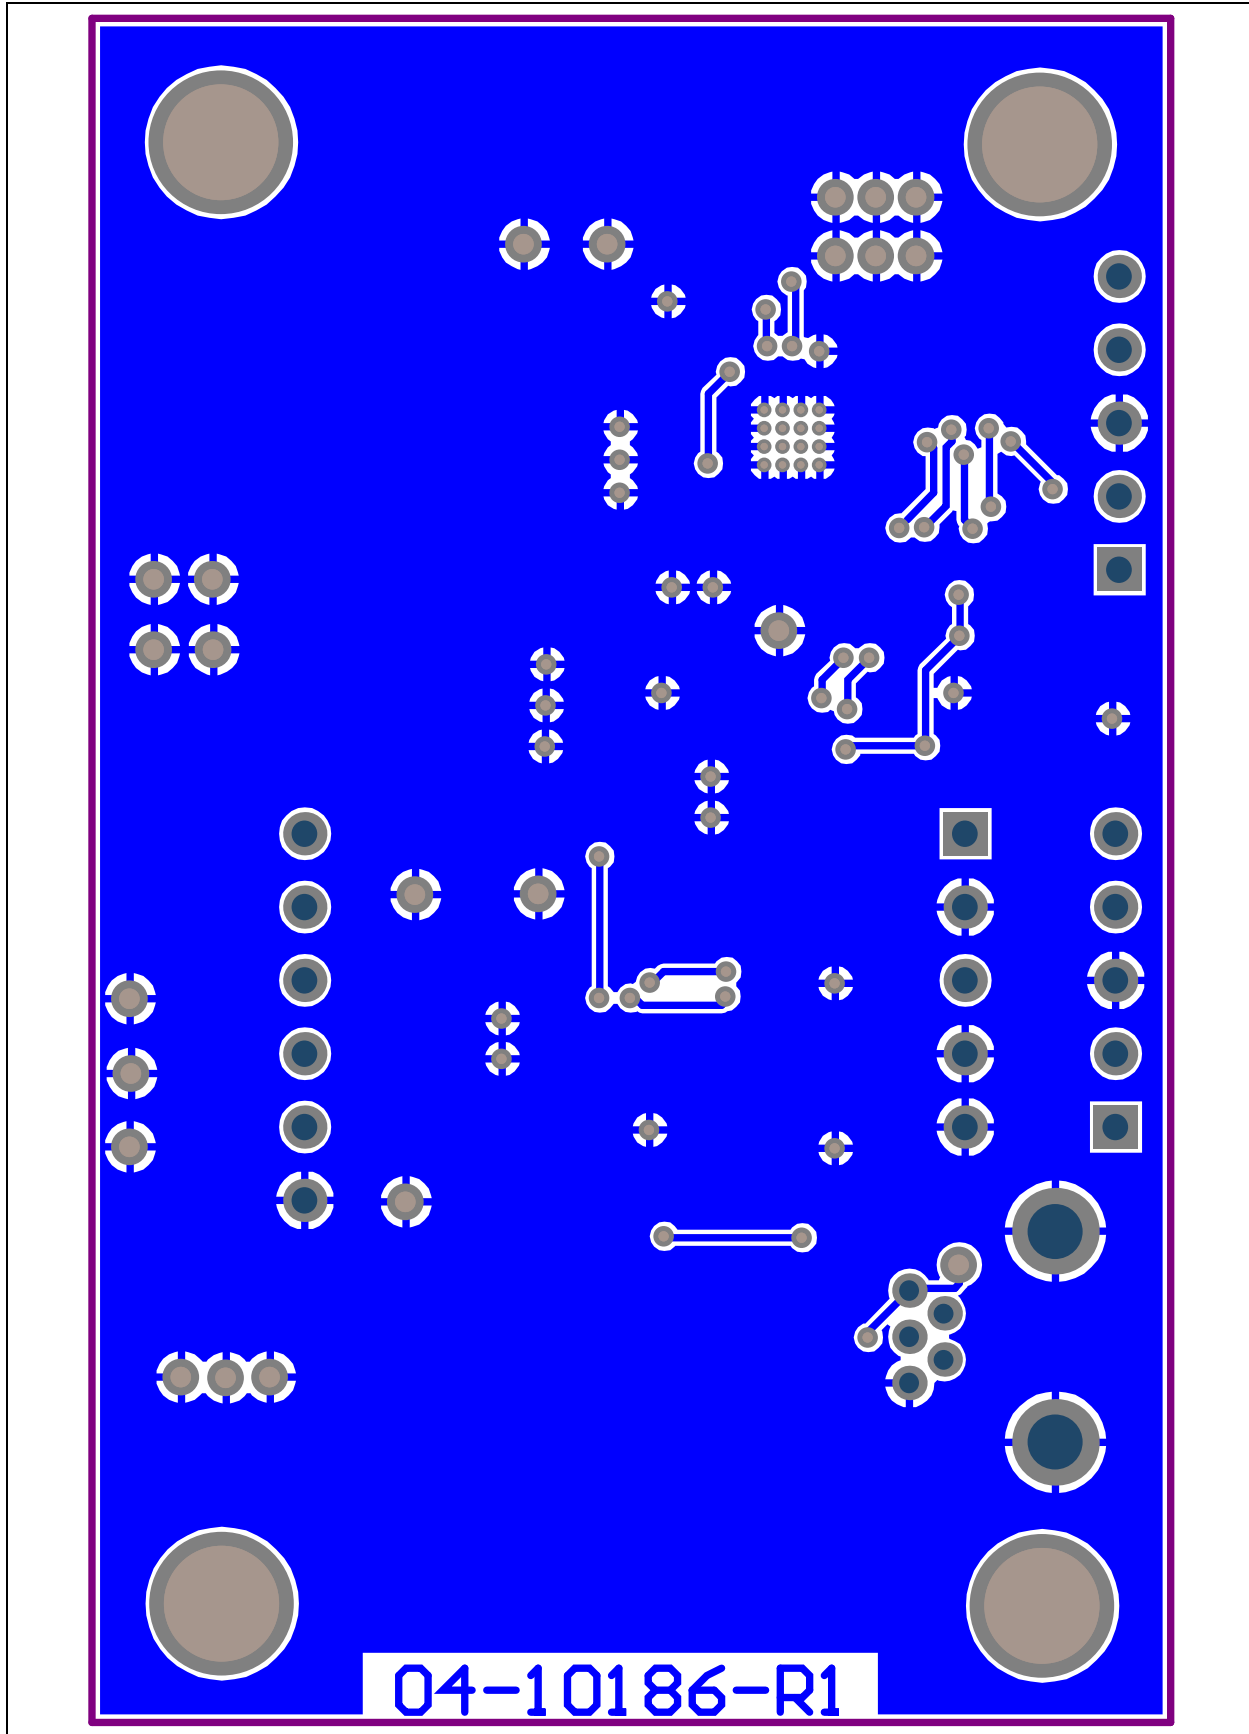


A.7 BOARD – BOTTOM COPPER AND SILK

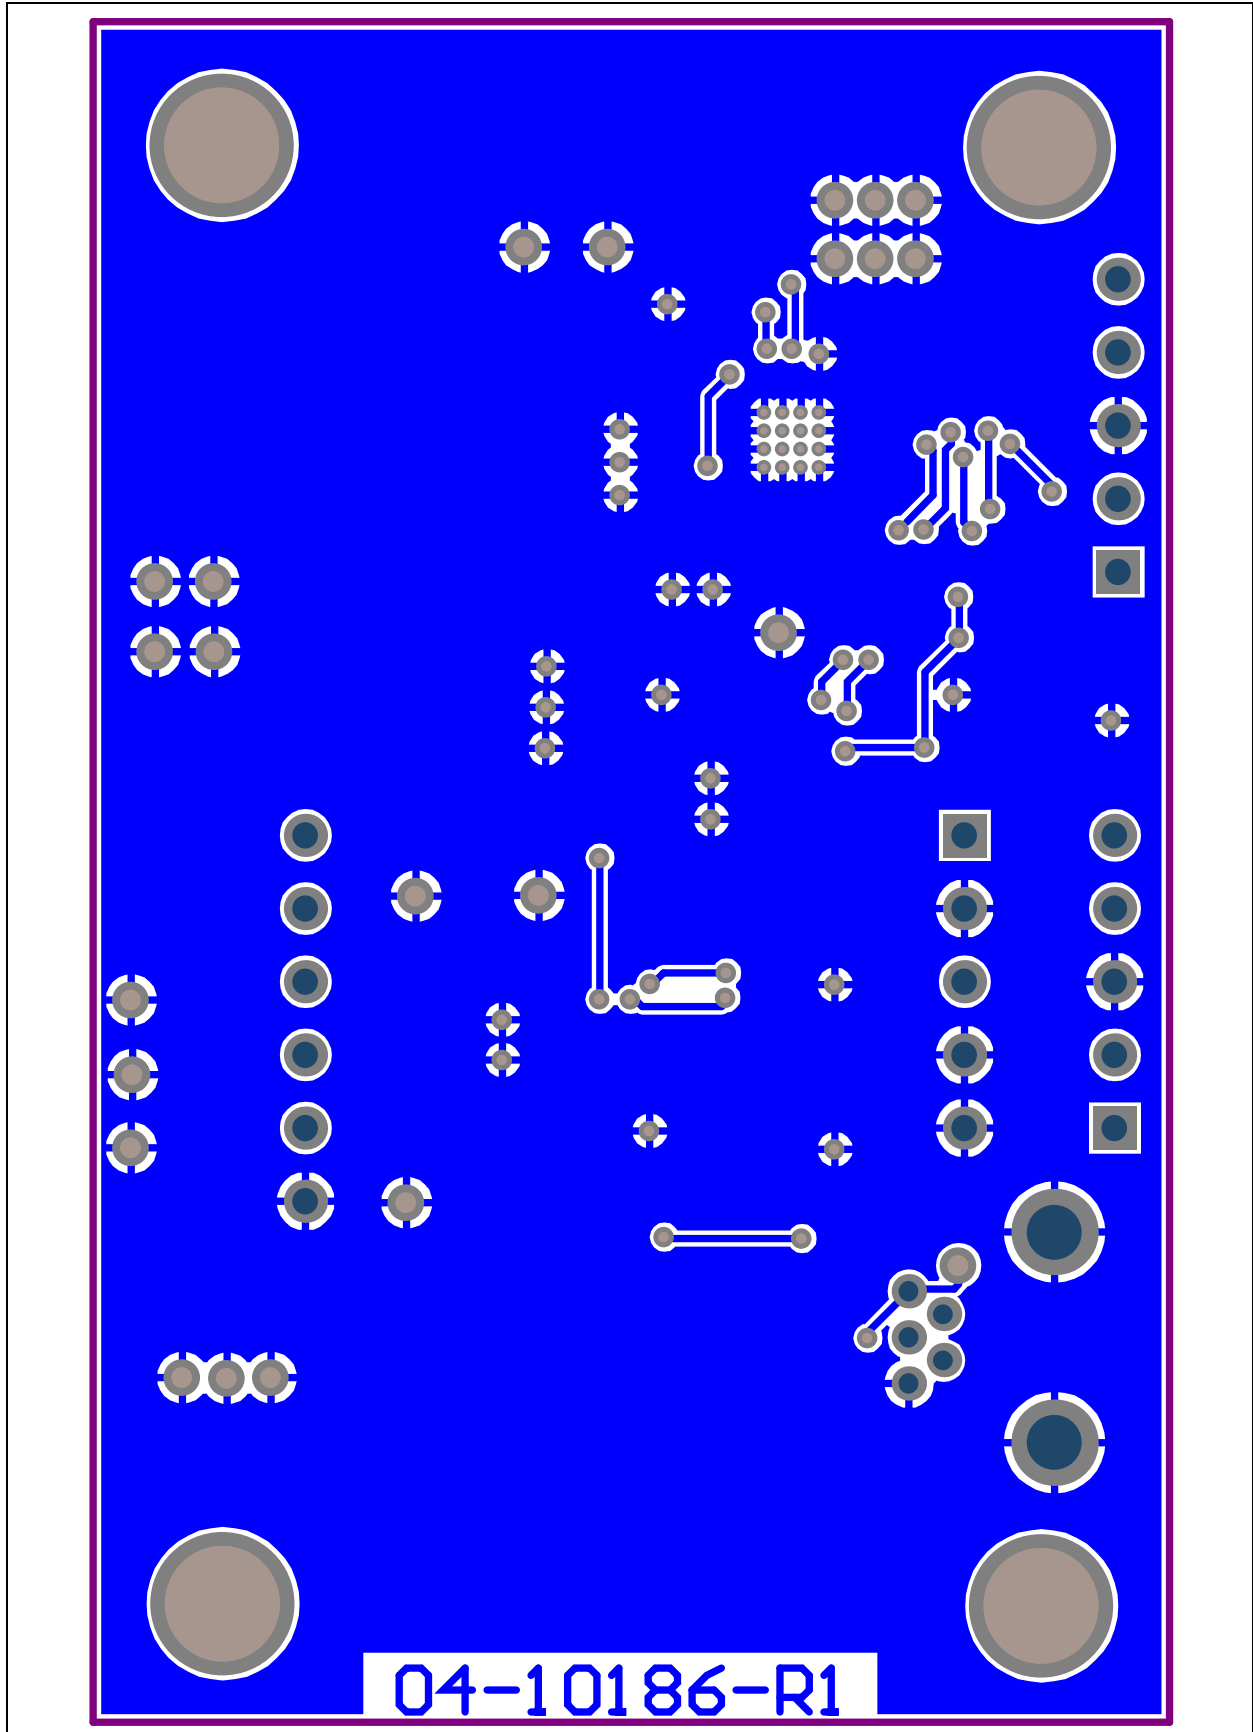


A.8 BOARD – BOTTOM SOLDER

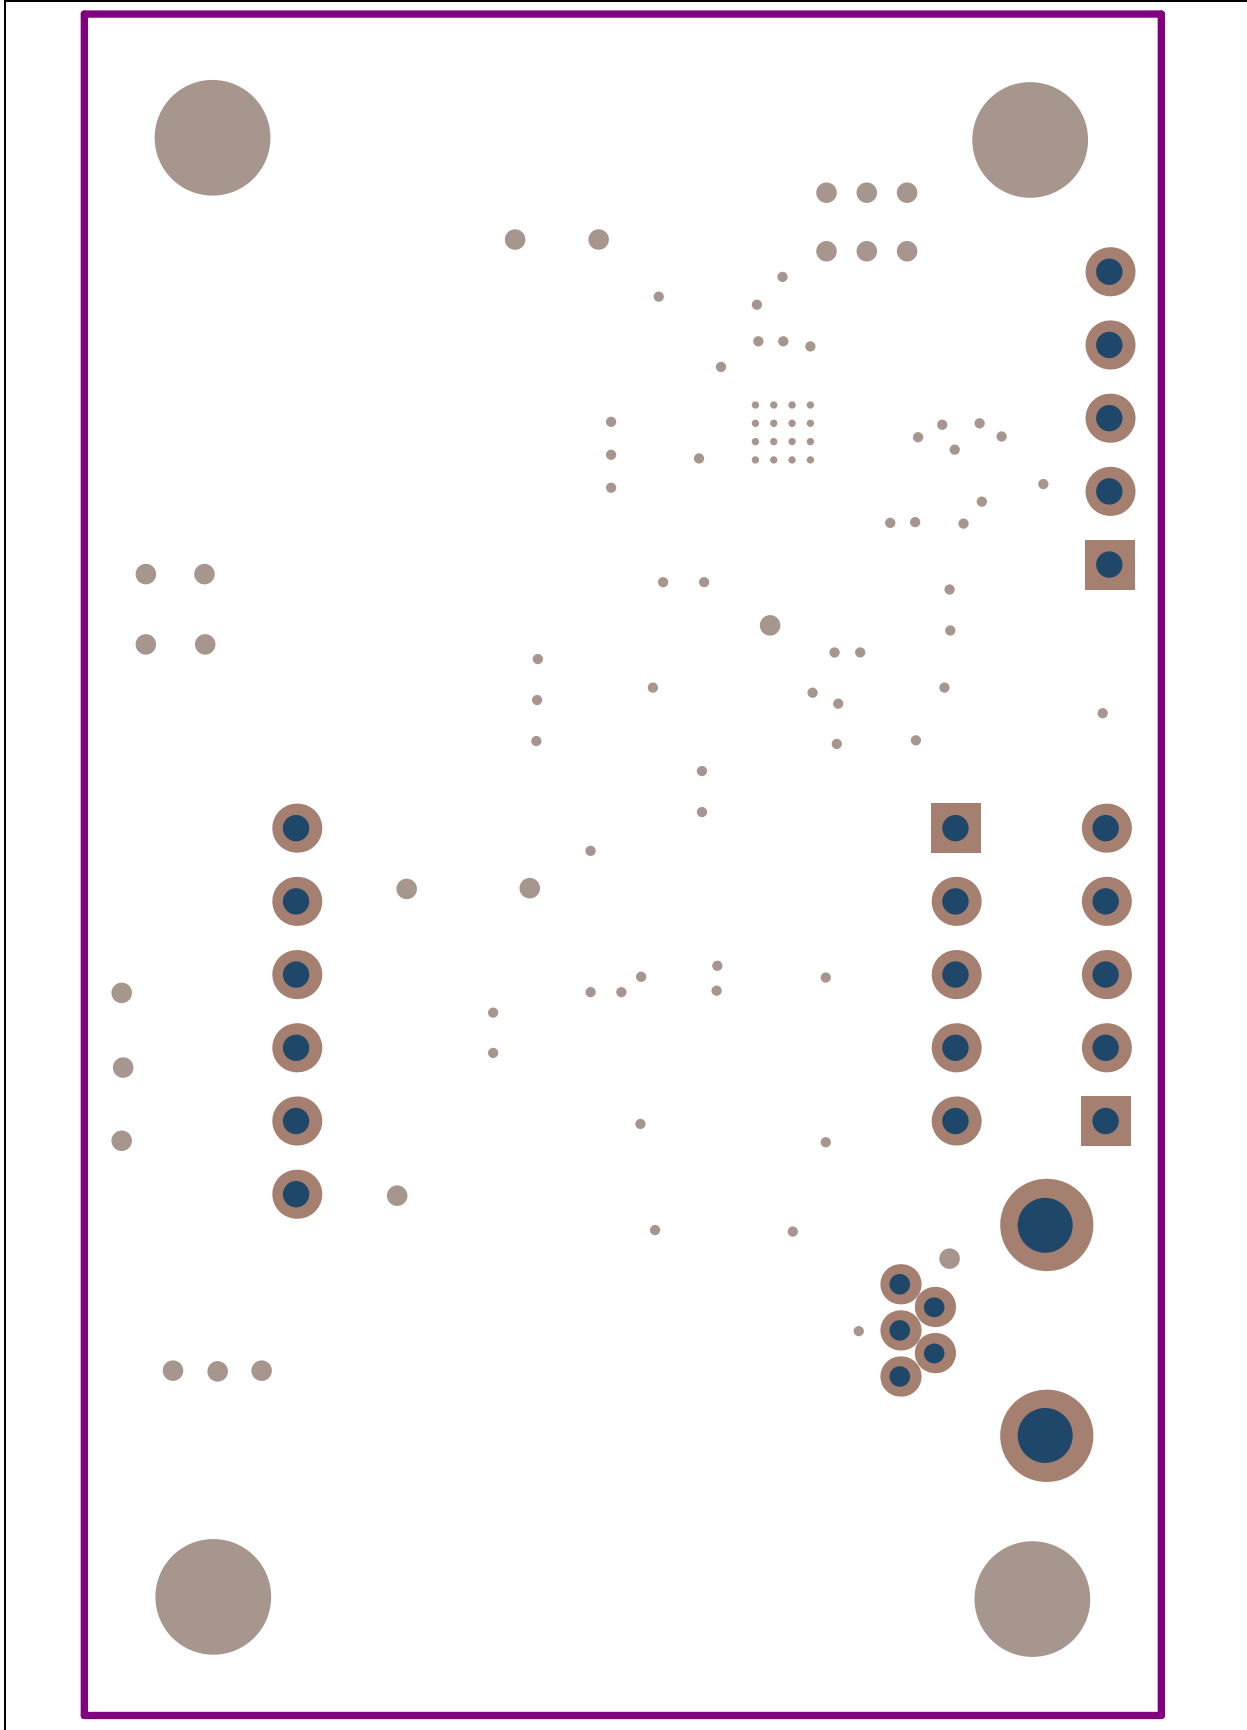


A.9 DAUGHTER BOARD - SCHEMATIC

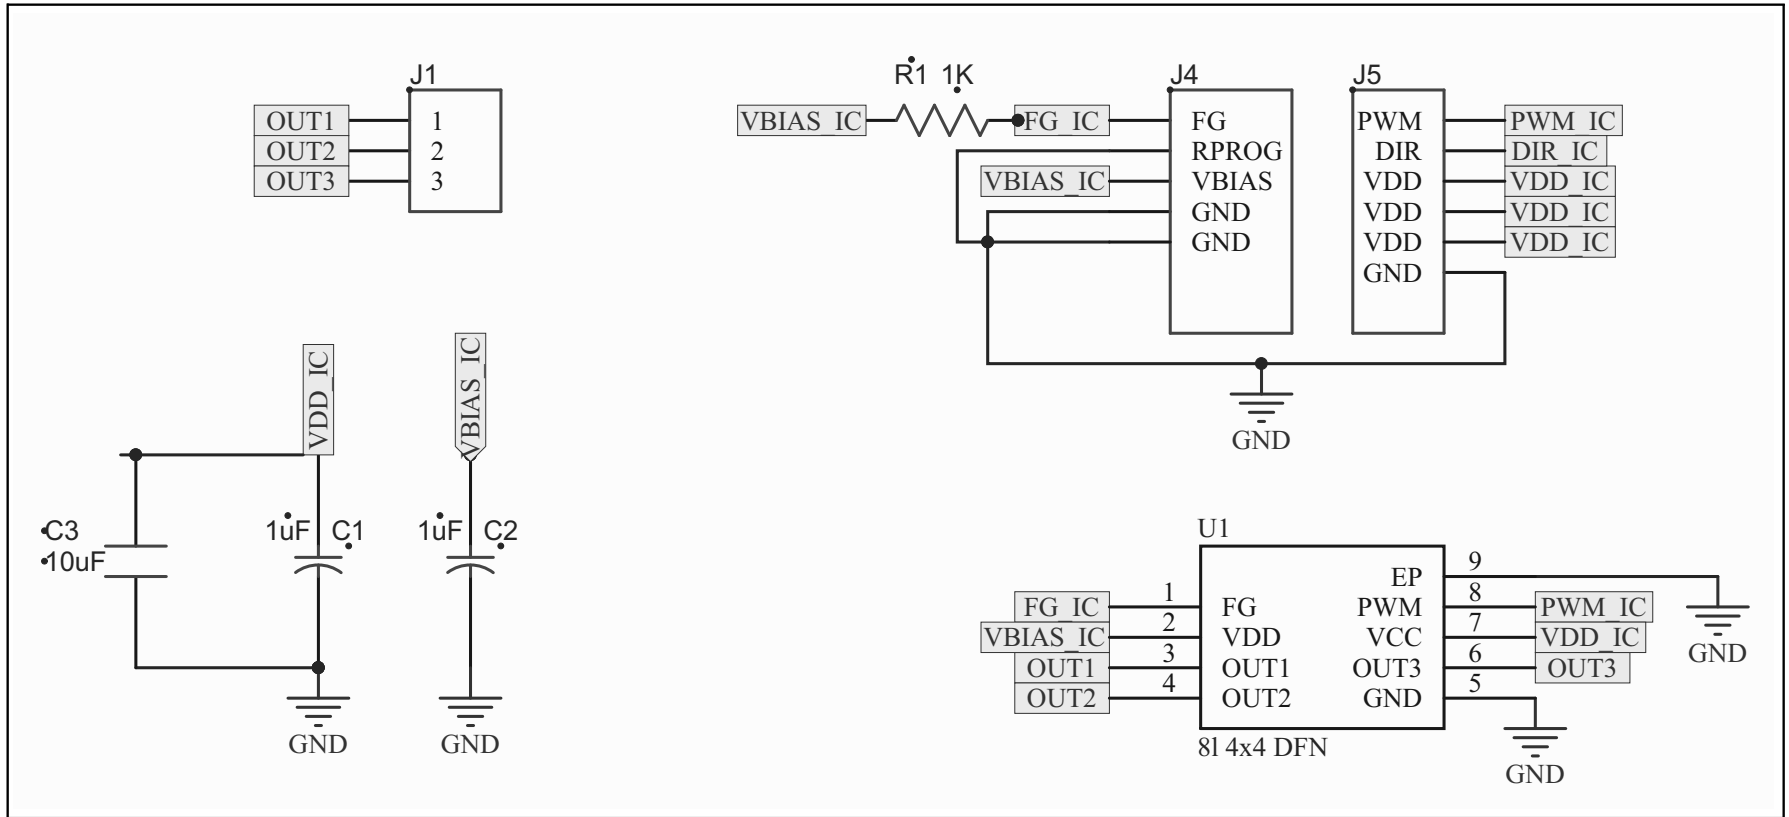


A.10 DAUGHTER BOARD - TOP SILK

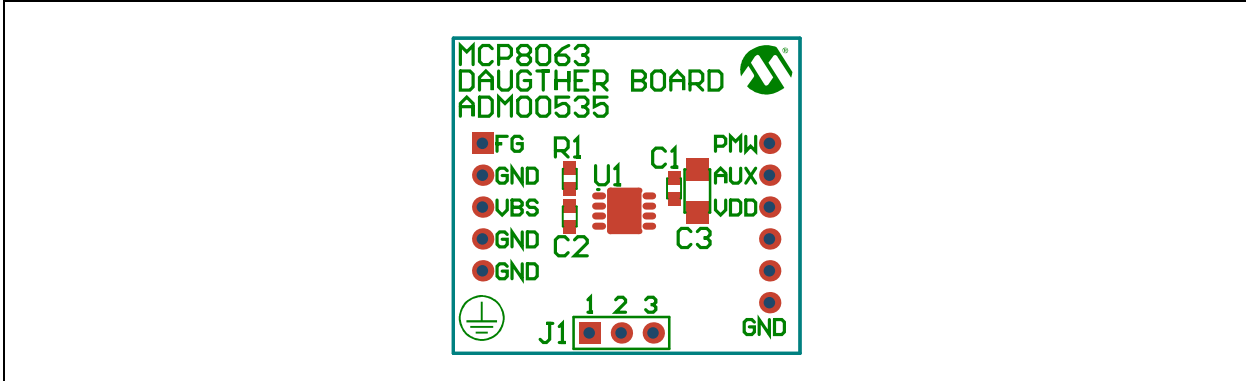


A.11 DAUGHTER BOARD - TOP COPPER AND SILK

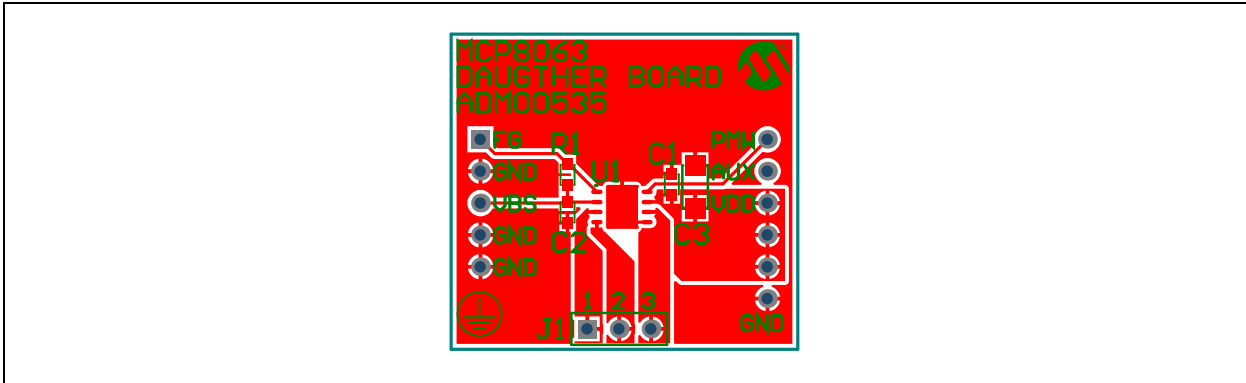


A.12 DAUGHTER BOARD - TOP COPPER

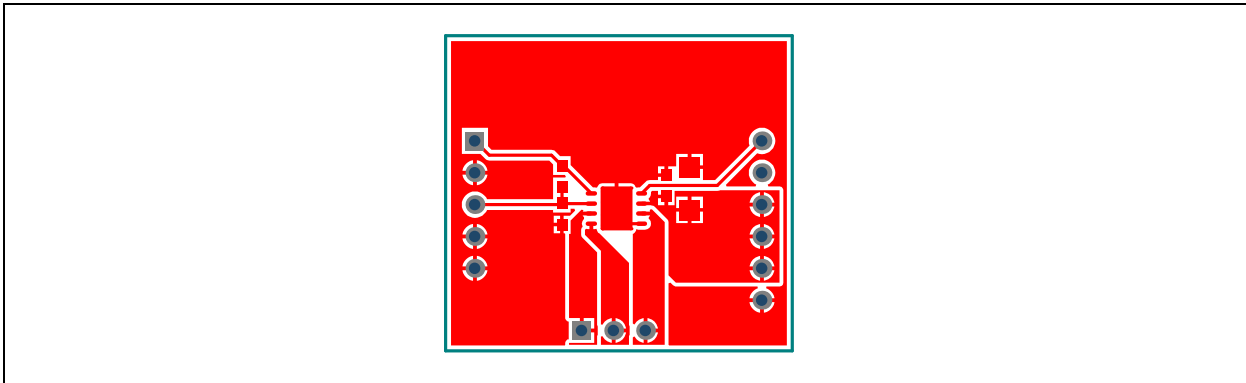


A.13 DAUGHTER BOARD - BOTTOM COPPER

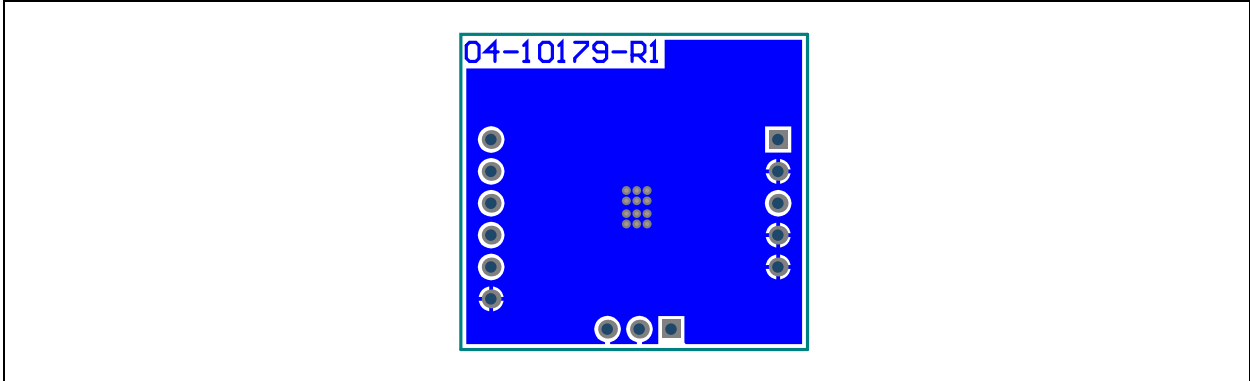

A.14 DAUGHTER BOARD - BOTTOM COPPER AND SILK

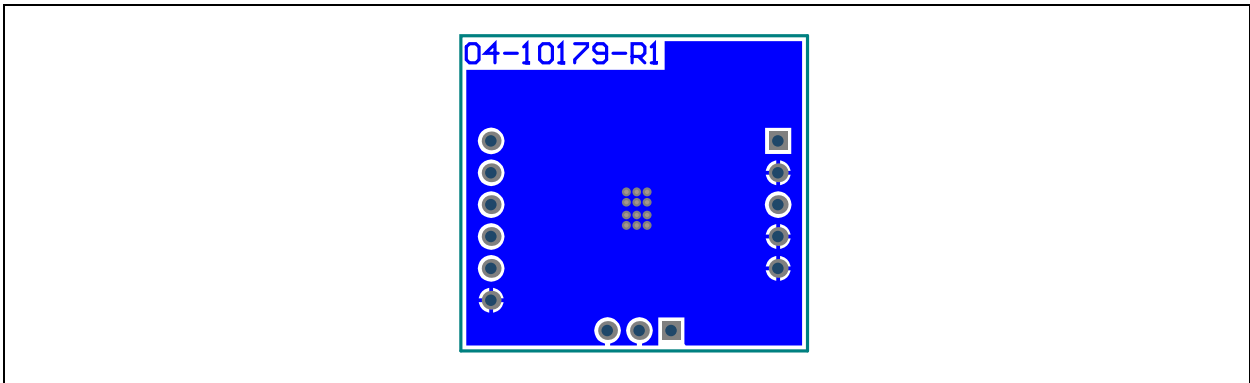

A.15 DAUGHTER BOARD - BOTTOM SOLDER

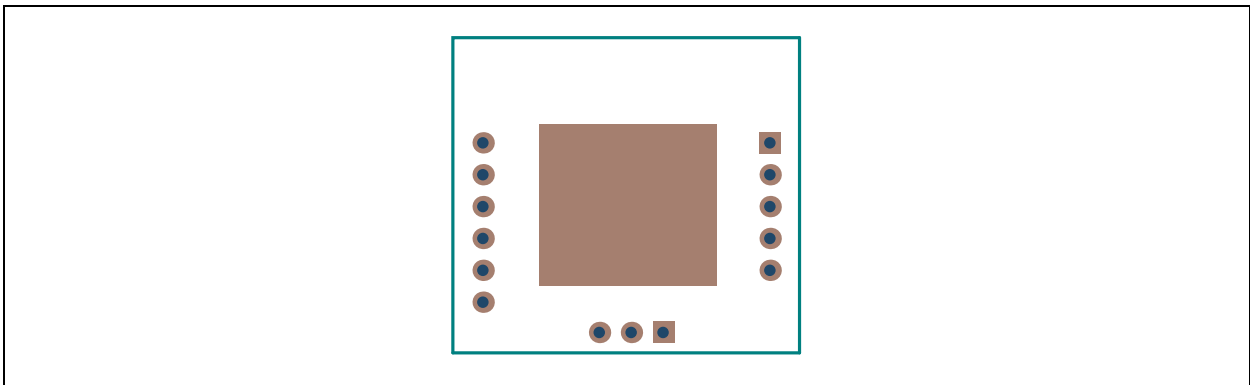

NOTES:



**MCP8063 12V 3-PHASE BLDC
SENSORLESS FAN CONTROLLER
DEMONSTRATION BOARD KIT
USER'S GUIDE**

Appendix B. Bill of Materials (BOM)

TABLE B-1: BILL OF MATERIALS (BOM) - 12V 3-PHASE BLDC SENSORLESS FAN CONTROLLER DEMONSTRATION BOARD (ADM00532)

Qty	Reference	Description	Manufacturer	Part Number
3	C1, C17, C18	Cap. ceramic 1 μ F 6.3V 10% X5R 0603	TDK Corporation	C1608X5R0J105K
3	C2, C5, C19	Cap. ceramic 10 μ F 6.3V 20% X5R 0603	TDK Corporation	C1608X5R0J106M080AB
6	C3, C4, C6 – C8, C13	Cap. ceramic 0.1 μ F 25V 20% X7R 0603	TDK Corporation	C1608X7R1E104M080AA
1	C11	Cap. ceramic 0.22 μ F 16V 10% X7R 0603	TDK Corporation	C1608X7R1C224K080AC
5	C9, C10, C12, C14, C15	Cap. ceramic 10 μ F 10V Y5V 1206	TDK Corporation	C3216Y5V1A106Z/1.15
1	C16	Cap. alum. 150 μ F 25V 20% SMD	Panasonic® - ECG	EEE-FTE151XAP
3	D1 – D3	LED chip-led 633 NM red 0805 SMD	OSRAM Opto Semiconductors GmbH.	LS R976-NR-1
1	D4	Schottky diode 30V 0.2A SOD323	NXP Semiconductor	1PS76SB10,115
1	J1	Conn. USB recept. 5 POS rt. angle	Molex®	548190519
2	J2, J5	Conn. header 5 POS 0.050" T/H gold	Samtec, Inc.	TMS-105-02-G-S
1	J3	Conn. recept. 5 POS 0.100 vert. gold	TE Connectivity, Ltd.	5-534237-3
1	J4	Conn. recept. 6 POS 0.100 vert. gold	TE Connectivity, Ltd.	534237-4
1	L1	Inductor power 22 μ H 30% shield SMD	Bourns®, Inc.	SRU1048-220Y
	PCB	Printed Circuit Board – MCP8063 12V 3-Phase BLDC Sensorless Fan Controller Demonstration Board	—	104-00532
1	Q1	MOSFET N-Channel dual 30V 8-SOIC	Vishay Siliconix	SI4330DY-T1-E3
5	R1, R2, R9, R10, R16	Res. 1.00 k Ω 1/10W 1% 0603	TE Connectivity, Ltd.	1622866-1
1	R3	Res. 100 k Ω 1/10W 1% 0603	TE Connectivity, Ltd.	1622827-1
5	R4 – R7, R11	Res. 10.0 k Ω 1/10W 1% 0603	TE Connectivity, Ltd.	1622829-1
3	R13 – R15	Res. 4.02 k Ω 1/10W 1% 0603 SMD	Panasonic - ECG	ERJ-3EKF4021V
1	R8	Res. 470 Ω 1/10W 1% 0603 SMD	Panasonic - ECG	ERJ-3EKF4700V
1	R12	Res. 0.1 Ω 1/3W 1% 1210 SMD	Panasonic - ECG	ERJ-L14KF10CU
2	TP1, TP2	PC test point mini SMD	Keystone Electronics Corp.	5019

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.

TABLE B-1: BILL OF MATERIALS (BOM) - 12V 3-PHASE BLDC SENSORLESS FAN CONTROLLER DEMONSTRATION BOARD (ADM00532) (CONTINUED)

Qty	Reference	Description	Manufacturer	Part Number
1	U1	IC reg. LDO 3.3V 0.3A 5-lead SOT-23	Microchip Technology Inc.	MCP1824T-3302E/OT
1	U2	IC ADC 18 bit 3.75 SPS 1 ch. 6-lead SOT-23	Microchip Technology Inc.	MCP3421A1T-E/CH
1	U3	IC MCU 16 bit 64 KB Flash 28-lead SSOP	Microchip Technology Inc.	PIC24FJ64GB002-1/SS
1	U4	IC reg. controller Buck PWM 24-lead QFN	Microchip Technology Inc.	MCP19110-E/MJ-ND

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.

TABLE B-2: BILL OF MATERIALS (BOM) - MCP8063 DAUGHTER BOARD (ADM00535)

Qty	Reference	Description	Manufacturer	Part Number
2	C1, C2	Cap. ceramic 1UF 16V 10% X7R 0603	AVX Corporation	0603YC105KAT2A
1	C3	Cap. ceramic 10UF 16V 10% X5R 1206	AVX Corporation	1206YD106KAT2A
1	R1	Res. 10.0K OHM 1/16W 1% 0603	TE Connectivity, Ltd.	5-1879337-9
1	J1	Conn. header 3POS .100 R/A tin	Molex®	22288030
1	J2	5x1 header 100" SR straight	FCI	68000-105HLF
1	J3	Conn. header 6POS 100 STR 30AU	FCI	68000-106HLF
1	U1	MCP8063	Microchip Technology Inc.	MCP8063-E/MD

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.

NOTES:



MICROCHIP

Worldwide Sales and Service

AMERICAS

Corporate Office

2355 West Chandler Blvd.
Chandler, AZ 85224-6199

Tel: 480-792-7200

Fax: 480-792-7277

Technical Support:

[http://www.microchip.com/
support](http://www.microchip.com/support)

Web Address:

www.microchip.com

Atlanta

Duluth, GA

Tel: 678-957-9614

Fax: 678-957-1455

Austin, TX

Tel: 512-257-3370

Boston

Westborough, MA

Tel: 774-760-0087

Fax: 774-760-0088

Chicago

Itasca, IL

Tel: 630-285-0071

Fax: 630-285-0075

Cleveland

Independence, OH

Tel: 216-447-0464

Fax: 216-447-0643

Dallas

Addison, TX

Tel: 972-818-7423

Fax: 972-818-2924

Detroit

Novi, MI

Tel: 248-848-4000

Houston, TX

Tel: 281-894-5983

Indianapolis

Noblesville, IN

Tel: 317-773-8323

Fax: 317-773-5453

Los Angeles

Mission Viejo, CA

Tel: 949-462-9523

Fax: 949-462-9608

New York, NY

Tel: 631-435-6000

San Jose, CA

Tel: 408-735-9110

Canada - Toronto

Tel: 905-673-0699

Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office

Suites 3707-14, 37th Floor
Tower 6, The Gateway
Harbour City, Kowloon

Hong Kong

Tel: 852-2943-5100

Fax: 852-2401-3431

Australia - Sydney

Tel: 61-2-9868-6733

Fax: 61-2-9868-6755

China - Beijing

Tel: 86-10-8569-7000

Fax: 86-10-8528-2104

China - Chengdu

Tel: 86-28-8665-5511

Fax: 86-28-8665-7889

China - Chongqing

Tel: 86-23-8980-9588

Fax: 86-23-8980-9500

China - Dongguan

Tel: 86-769-8702-9880

China - Hangzhou

Tel: 86-571-8792-8115

Fax: 86-571-8792-8116

China - Hong Kong SAR

Tel: 852-2943-5100

Fax: 852-2401-3431

China - Nanjing

Tel: 86-25-8473-2460

Fax: 86-25-8473-2470

China - Qingdao

Tel: 86-532-8502-7355

Fax: 86-532-8502-7205

China - Shanghai

Tel: 86-21-5407-5533

Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829

Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8864-2200

Fax: 86-755-8203-1760

China - Wuhan

Tel: 86-27-5980-5300

Fax: 86-27-5980-5118

China - Xian

Tel: 86-29-8833-7252

Fax: 86-29-8833-7256

ASIA/PACIFIC

China - Xiamen

Tel: 86-592-2388138

Fax: 86-592-2388130

China - Zhuhai

Tel: 86-756-3210040

Fax: 86-756-3210049

India - Bangalore

Tel: 91-80-3090-4444

Fax: 91-80-3090-4123

India - New Delhi

Tel: 91-11-4160-8631

Fax: 91-11-4160-8632

India - Pune

Tel: 91-20-3019-1500

Japan - Osaka

Tel: 81-6-6152-7160

Fax: 81-6-6152-9310

Japan - Tokyo

Tel: 81-3-6880-3770

Fax: 81-3-6880-3771

Korea - Daegu

Tel: 82-53-744-4301

Fax: 82-53-744-4302

Korea - Seoul

Tel: 82-2-554-7200

Fax: 82-2-558-5932 or

82-2-558-5934

Malaysia - Kuala Lumpur

Tel: 60-3-6201-9857

Fax: 60-3-6201-9859

Malaysia - Penang

Tel: 60-4-227-8870

Fax: 60-4-227-4068

Philippines - Manila

Tel: 63-2-634-9065

Fax: 63-2-634-9069

Singapore

Tel: 65-6334-8870

Fax: 65-6334-8850

Taiwan - Hsin Chu

Tel: 886-3-5778-366

Fax: 886-3-5770-955

Taiwan - Kaohsiung

Tel: 886-7-213-7828

Taiwan - Taipei

Tel: 886-2-2508-8600

Fax: 886-2-2508-0102

Thailand - Bangkok

Tel: 66-2-694-1351

Fax: 66-2-694-1350

EUROPE

Austria - Wels

Tel: 43-7242-2244-39

Fax: 43-7242-2244-393

Denmark - Copenhagen

Tel: 45-4450-2828

Fax: 45-4485-2829

France - Paris

Tel: 33-1-69-53-63-20

Fax: 33-1-69-30-90-79

Germany - Dusseldorf

Tel: 49-2129-3766400

Germany - Munich

Tel: 49-89-627-144-0

Fax: 49-89-627-144-44

Germany - Pforzheim

Tel: 49-7231-424750

Italy - Milan

Tel: 39-0331-742611

Fax: 39-0331-466781

Italy - Venice

Tel: 39-049-7625286

Netherlands - Drunen

Tel: 31-416-690399

Fax: 31-416-690340

Poland - Warsaw

Tel: 48-22-3325737

Spain - Madrid

Tel: 34-91-708-08-90

Fax: 34-91-708-08-91

Sweden - Stockholm

Tel: 46-8-5090-4654

UK - Wokingham

Tel: 44-118-921-5800

Fax: 44-118-921-5820

01/27/15